


4K / HDR

HDMI to HDBaseT™ HDMI 1 x 4 Extended Distance Distribution Amplifier

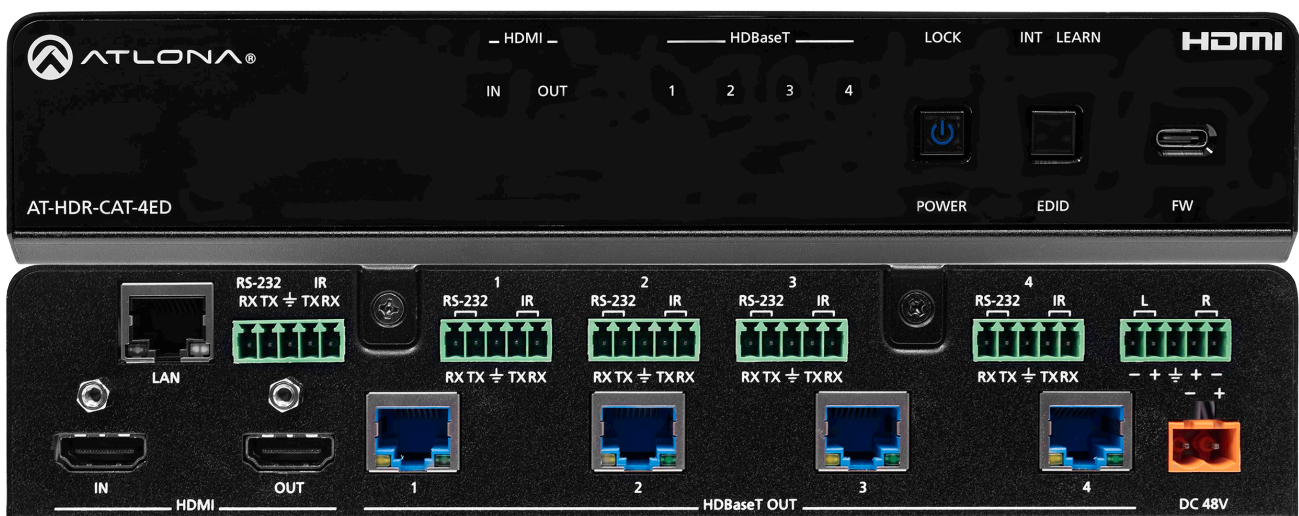

Version Information

Version	Release Date	Notes
1	Jan 2023	Initial release

Sales, Marketing, and Customer Support

Main Office

Atlona Incorporated
70 Daggett Drive
San Jose, CA 95134
United States

Office: +1.408.962.0515

Sales and Customer Service Hours
Monday - Friday: 6:00 a.m. - 4:30 p.m. (PST)

<https://atlona.com/>

International Headquarters

Atlona International AG
Tödistrasse 18
8002 Zürich
Switzerland

Office: +41.43.508.4321

Sales and Customer Service Hours
Monday - Friday: 09:00 - 17:00 (UTC +1)

Operating Notes



IMPORTANT: Visit <https://www.atlona.com/product/AT-HDR-CAT-4ED> for the latest firmware updates and User Manual.

Warranty



To view the product warranty, use the following link or QR code:

<https://atlona.com/warranty/>.

Safety and Certification



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT OPEN ENCLOSURE OR EXPOSE TO RAIN OR MOISTURE. NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the product.



The information bubble is intended to alert the user to helpful or optional operational instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of a polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
11. Only use attachments/accessories specified by Atlona.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the product has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the product, the product has been exposed to rain or moisture, does not operate normally, or has been dropped.



FCC Compliance

FCC Compliance and Advisory Statement: This hardware device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulations.

Copyright, Trademark, and Registration

© 2023 Atlona Inc. All rights reserved. "Atlona" and the Atlona logo are registered trademarks of Atlona Inc. Pricing, specifications and availability subject to change without notice. Actual products, product images, and online product images may vary from images shown here.

HDMI™ The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI licensing Administrator, Inc.

Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, the Symbol, DTS and the Symbol together, and Digital Surround are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

All other trademark(s), copyright(s), and registered technologies mentioned(s) in this document are the properties of their respective owner(s).

Table of Contents

Introduction	7
Features	7
Package Contents	7
Panel Description	8
Front Panel	8
Back Panel	9
Connection Instructions	10
Connection Diagram	11
IP Configuration	12
Setting the IP Mode	12
Setting the IP Address Using Commands	13
Auto IP (APIPA) Mode	14
Device Operation	15
LED Indicators	15
Logging in to the Web Server	16
Login Registration	16
Logging in after Registration	17
Locking / Unlocking the Front Panel	18
Using the Front Panel	18
Using the Web Server	18
EDID Management	19
Learning an EDID using the Front Panel	19
Learning the EDID using the Web Server	20
Locking the EDID	20
Selecting EDID Presets	21
Changing Login Credentials	22
Changing the Username and Password	22
Controlling Audio Output	23
Audio Port Wiring	23
De-Embedding Audio	24
Adjusting the Volume Level	24
RS-232 Control	25
RS-232 Port Wiring	25
Pass-through mode	27
Control mode	28
IR Control	29
Controlling Display Devices	29
Controlling Source Devices	30
Power Button Modes	31
Normal Operation	31
Powering Sink Devices	32
Powering Sinks and the AT-HDR-CAT-4ED	34
Setting the Host Name	35
Resetting to Factory-Default Settings	36
Configuration and Management Interfaces	38
Web Server	38
Register page	38
Login page	39
Info page	40
A/V Settings page	41
RS-232 page	42
EDID page	43
Config page	44
HDBT page	45
System page	46

Table of Contents

Appendix	49
Updating the Firmware	49
Using the Web Server	49
Using USB	50
Default Settings	51
Specifications	52

Introduction

The Atlona **AT-HDR-CAT-4ED** is a high dynamic range (HDR) distribution amplifier with one HDMI® input and four extended distance HDBaseT™ outputs. Each output transmits 4K/UHD video @ 60 Hz with 4:4:4 chroma sampling plus support for HDR formats, multi-channel audio, Ethernet, control signals, and power up to 330 ft. (100 m) over Category 6/6A cable. The HDR-CAT-4ED features sophisticated integration capabilities designed for commercial AV distribution applications including HDMI pass-through, audio de-embedding, EDID management, CEC display control, RS-232 and IR control extension, remote power for receivers, and HDBaseT link testing. It offers compatibility with any TCP/IP or RS-232 control system and is housed in 1U, half-rack width enclosure with external universal power supply. The HDR-CAT-4ED is ideal for sending HDR and 4K/60 4:4:4 content to AT-HDR-EX-100CEA-RX receivers.

Features


- 4K HDR extended distance distribution amplifier with one HDMI input and four HDBaseT outputs.
- Pass-through HDMI output to support local monitor.
- 4K/UHD capability @ 60 Hz with 4:4:4 chroma sampling.
- Supports HDR10, HLG, and Dolby® Vision™ HDR formats.
- Features visually lossless compression with no latency to enable HDR and 4K/60 4:4:4 video signal extension over HDBaseT.
- HDBaseT outputs extend HDMI, Ethernet, control signals, and power up to 330 feet (100 meters) for both 4K HDR and 1080p with Category 6/6A.
- Bidirectional RS-232 and IR control extension for each output.
- Remotely powers compatible receivers over HDBaseT.
- CEC display control sends display power on/off commands over HDBaseT using the power button, IP, or RS-232.
- Audio de-embedding to balanced analog output with volume control for integration with a separate audio system.
- HDBaseT link test verifies cable, termination, and link quality for more reliable installations.
- Multi-channel audio pass-through.
- Cascade up to 8 units to expand system without compromising performance.
- Compliant with HDCP 2.2, the latest specification for passing protected content between devices.
- Manages EDID communications with the source through a display's EDID or internally stored EDID.
- Intuitive GUI-based configuration using integrated web server.
- Flexible control options via TCP/IP, RS-232, and IR with Atlona Velocity™ or third-party control systems.
- Front panel includes LEDs for power, HDBaseT link, and HDMI signal status information as well as buttons for power and EDID control.
- Compatible with HDR-EX-100CEA-RX receivers for 4K/60 4:4:4 HDR as well as AT-UHD-EX receivers for resolutions up to 4K60 4:2:0.
- 1U, half rack width enclosure with surface and rack mounting hardware included.

Package Contents

1 x AT-HDR-CAT-4ED	1 x Long rack ear
6 x 5-pin captive screw connectors	1 x Short rack ear
1 x 2-pin captive screw connector	2 x Mounting plate
1 x 48 V / 2.08 A power supply	4 x Feet w/ rubber grips
1 x AC cord	

Panel Description

Front Panel

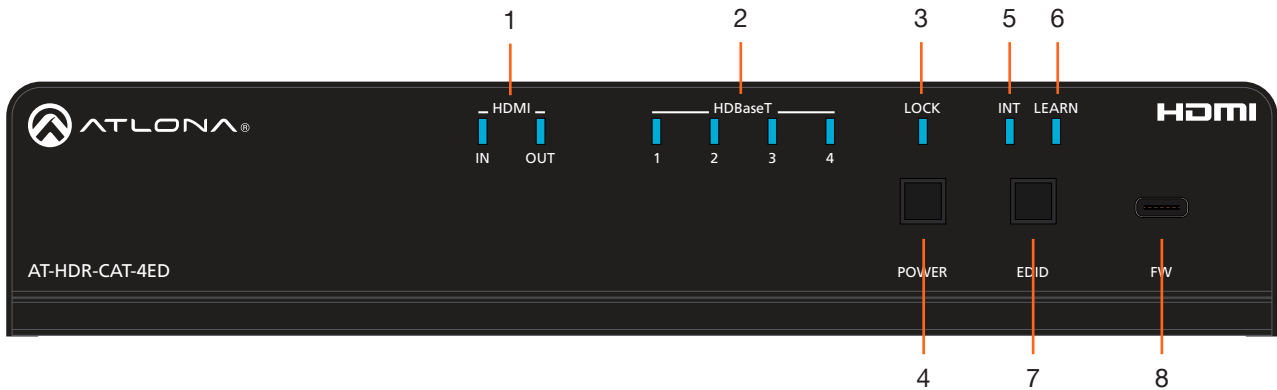

1 HDMI Indicators

Displays the status of the **HDMI IN** and **HDMI OUT** ports. When connected to a source or display (sink) device, respectively, the LED indicator will be blue.

2 HDBaseT Indicators

Displays the status of the HDBaseT OUT ports. When connected to an HDBaseT receiver, with an active sink, the LED indicator will be blue. If no active sink is connected, or the sink is powered off, then the indicator will not be illuminated.

3 LOCK

This LED will be blue when the unit is locked.

4 POWER

Press this button to power-on or place the unit into standby mode.

5 INT

This LED indicator will be blue when the unit is using an internal EDID.

6 LEARN

This LED indicator will flash when a downstream EDID is being read into memory.


7 EDID

Press this button to switch between the internal (INT) and learned (LEARN) EDID modes.

8 FW

Connect a USB Type-A to USB-C cable from this port, to a computer, to update the firmware. Refer to [Updating the Firmware \(page 49\)](#) for more information.

Back Panel

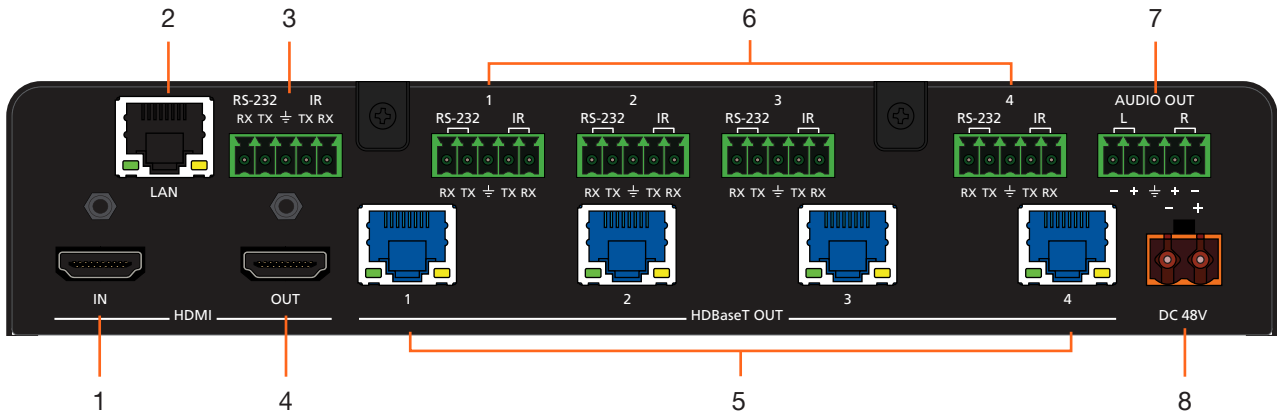

- 1 HDMI IN**
Connect an HDMI cable from this port to a source device.
- 2 LAN**
Connect an Ethernet cable from this port to the network.
- 3 RS-232 / IR (MASTER)**
Connect a control system or other DTE device to this port to control the AT-HDR-CAT-4ED.
- 4 HDMI OUT**
Connect an HDMI cable from this port to an HDMI input on a local display or an additional AT-HDR-CAT-4ED unit.
- 5 HDBaseT OUT**
Connect Ethernet cables from these ports to PoE-compatible receivers.
- 6 RS-232/IR 1 - 4**
Connect a control system or other DTE device to these ports for pass-through zone control. Each of these ports uses the associated HDBaseT OUT port. This allows RS-232 command data to be sent to a display (sink) device connected to a PoE-compatible receiver.
- 7 AUDIO OUT**
Connect the included 5-pin captive screw connector to this port and connect it to an audio amplifier, such as an AT-GAIN-60. Refer to [Controlling Audio Output \(page 23\)](#).
- 8 DC 48V**
Connect the included power supply to this power receptacle.

Connection Instructions

1. Connect an HDMI cable from a source to the **HDMI IN** port.
2. Connect an HDMI cable from the **HDMI OUT** port to a local display.
3. Connect up to four category cables from the **HDBaseT OUT** ports to compatible PoE-capable receivers. Refer to the table below for information on maximum cable length and supported resolutions.




IMPORTANT: Stranded or patch cable is not recommended due to performance issues. Shielded cables are strongly recommended to minimize signal noise and interference.

Cable	4K/UHD - Feet / Meters		1080p - Feet / Meters	
	Feet	Meters	Feet	Meters
HDMI	15	5	30	10
CAT5e/6	230	70	330	100
CAT6a/7	330	100	330	100

4. Connect an Ethernet cable from the **LAN** port to the Local Area Network (LAN). This step will be required in order to access the built-in web server.
5. Connect an RS-232 or IR cable from the control system to the RS-232/IR ports. Refer to [RS-232 Control \(page 25\)](#) and [IR Control \(page 29\)](#) for more information.
 - **MASTER RS-232/IR**
Connecting to this port will provide direct control of the AT-HDR-CAT-4ED. Control can be performed using either RS-232 or electrical IR.
 - **RS-232/IR 1 - RS-232/IR 4**
Each of these ports is associated to the respective **HDBaseT OUT** port. This allows RS-232 pass-through zone control of a display (sink) device that is connected to a PoE-compatible receiver. Control can be performed using RS-232 or electrical IR.
6. Connect an audio output device to the **AUDIO OUT** port. Refer to [Controlling Audio Output \(page 23\)](#) for more information.
7. Connect the included power supply to the **DC 48V** connector and connect the power cord to an available electrical outlet.

Connection Diagram

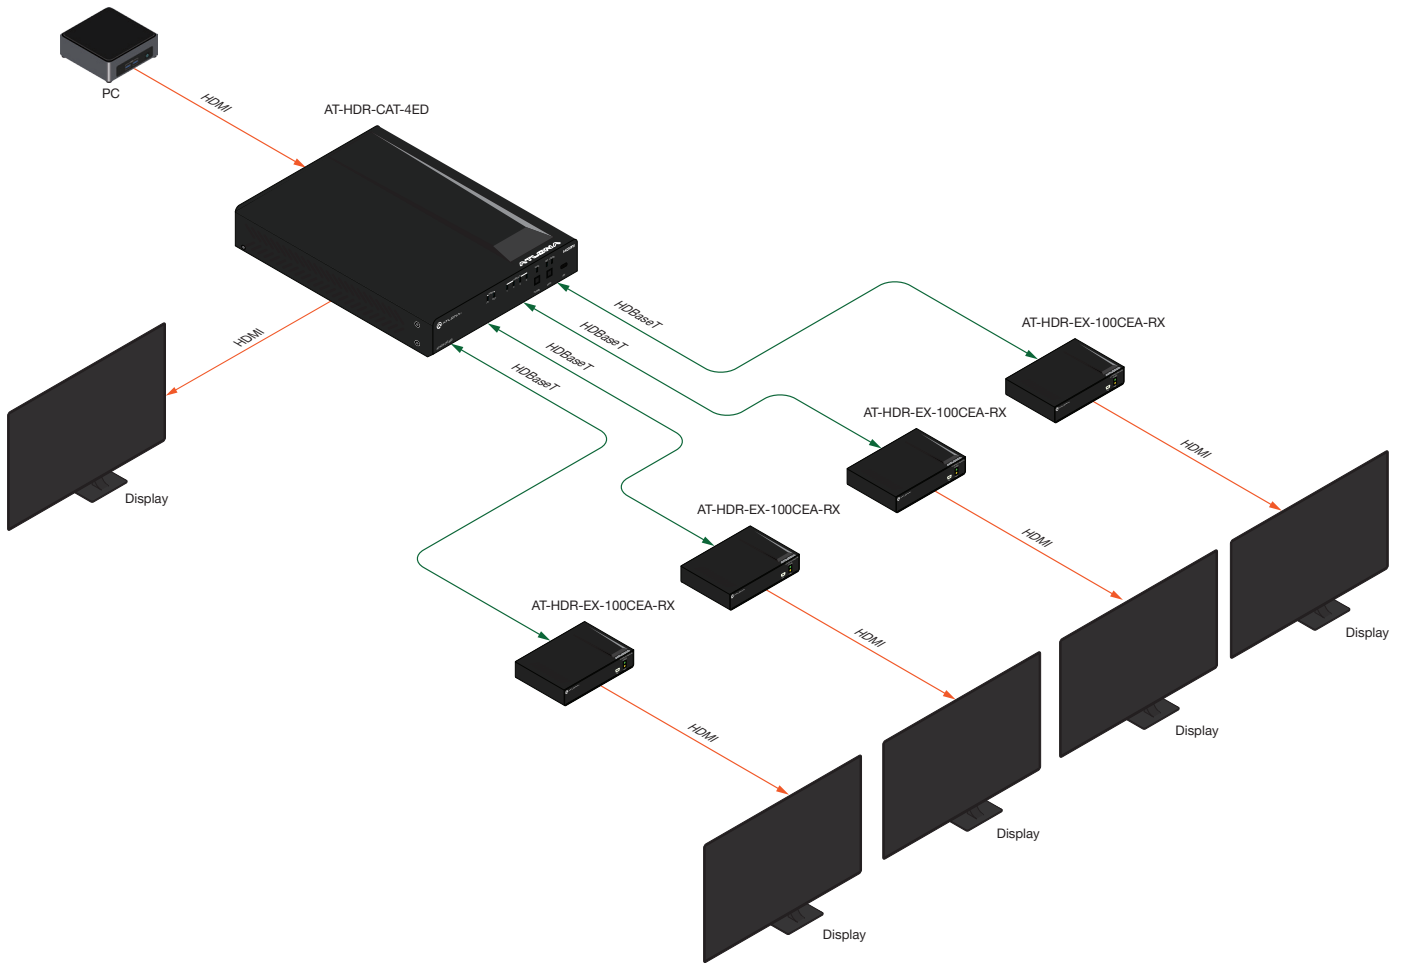

IP Configuration

The AT-HDR-CAT-4ED is shipped with DHCP enabled. Once connected to a network, the DHCP server (if available), will automatically assign an IP address to the unit. If the AT-HDR-CAT-4ED is unable to detect a DHCP server within 15 seconds, then the unit will use a self-assigned IP address within the range of 169.254.xxx.xxx/16. If this occurs, refer to [Auto IP \(APIPA\) Mode \(page 14\)](#).

Use an IP scanner, along with the MAC address on the bottom of the unit, to identify the unit on the network. If a static IP address is desired, the unit can be switched to static IP mode.




NOTE: When switching between DHCP and static IP mode, the AT-HDR-CAT-4ED will retain the last assigned IP address until it is changed manually (static IP mode) or assigned a new IP address by the DHCP server.

Setting the IP Mode

Using the Front Panel

1. Make sure the AT-HDR-CAT-4ED is powered.
2. Connect an Ethernet cable between the **LAN** port of the AT-HDR-CAT-4ED and the Local Area Network (LAN).
3. Press and hold the **POWER** button for approximately 15 seconds. Release the **POWER** button once all the front-panel LED indicators begin to flash. The number of flashes will indicate the currently selected IP mode. Refer to the table, below.

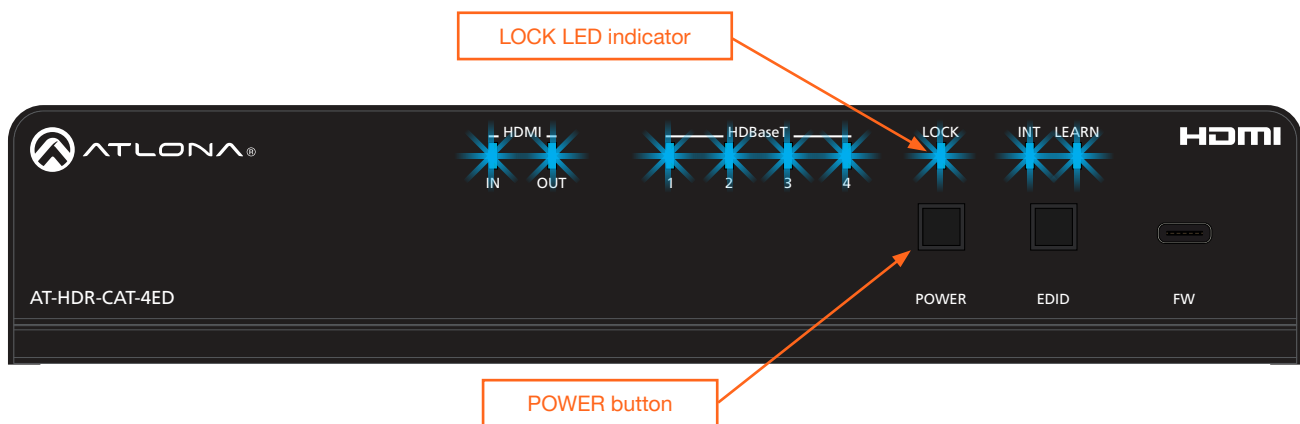

POWER button flashes	Description	
Two	Static IP mode	IP address: 192.168.1.254 Netmask: 255.255.0.0 Gateway: 192.168.1.1
Four	DHCP mode	

Using the Web Server

The IP mode of the AT-HDR-CAT-4ED can also be set using the built-in web server. In order to access the web server, the IP address of the AT-HDR-CAT-4ED must be known. Refer to [Logging in to the Web Server \(page 16\)](#) for more information.

1. Open the desired web browser and enter the IP address of the AT-HDR-CAT-4ED.
2. Log in using the required credentials.
3. Click **System** in the menu bar.
4. Click the **IP Mode** toggle to switch between the **DHCP** and **STATIC IP** setting. When set to **STATIC IP**, the **IP**, **Netmask**, and **Gateway** fields can be modified.
5. Click the **Save** button to save the changes.

MAC Address:	B8-98-B0-06-07-09		
IP Mode:	<input checked="" type="checkbox"/> STATIC IP <input type="checkbox"/>		
IP:	<input type="text" value="10.20.20.37"/>		
Netmask:	<input type="text" value="255.255.255.0"/>		<input type="button" value="Save"/>
Gateway:	<input type="text" value="10.20.20.1"/>		

Setting the IP Address Using Commands

Use the `IPStatic` and `IPDHCP` commands to switch between DHCP and IP mode through RS-232 or Telnet. Refer to API documentation for more information. All commands and their arguments are case-sensitive.

 **IMPORTANT:** Note that when switching between DHCP and static modes, within a Telnet session, the connection will be terminated once the `IPDHCP` command is executed.

- **Setting static IP mode**

1. Connect to the AT-HDR-CAT-4ED using RS-232 or Telnet.
2. Execute the `IPStatic` command. This command requires three arguments: the desired IP address of the AT-HDR-CAT-4ED, the subnet mask, and the gateway address. All arguments must be entered in dot-decimal notation. The following is an example:

```
IPStatic 192.168.1.112 255.255.255.0 192.168.1.1
```

└── IP address ─┘
└── Subnet mask ─┘
└── Gateway ─┘

- **Setting DHCP mode**

1. Connect to the AT-HDR-CAT-4ED using RS-232 or Telnet.
2. At the command line, execute the `IPDHCP on` command using the `on` argument, as shown. All characters are case-sensitive.

```
IPDHCP on
```

Once DHCP is enabled, the unit will be assigned an IP address by the DHCP server (if present).

Auto IP (APIPA) Mode

If the AT-HDR-CAT-4ED is unable to detect a DHCP server within 15 seconds, when set to DHCP mode, then the unit will use a self-assigned IP address within the IPv4 address block `169.254.xxx.xxx/16`. If this occurs, connect an Ethernet cable directly from the **LAN** port of the AT-HDR-CAT-4ED to the LAN port of a computer, then do the following:

1. Click **Start > Settings > Control Panel > Network and Sharing Center**.
2. Click **Change adapter settings**.
3. Right-click on the adapter that is used to establish a wired connection to the network, and select **Properties** from the context menu.
4. Under the **Ethernet Properties** dialog box, select **Internet Protocol Version 4** and then click the **Properties** button. Click the **Use the following IP address** radio button.


















IMPORTANT: Before continuing, write down the current IP settings in order to restore them, later. If **Obtain an IP address automatically** and **Obtain DNS server automatically** are selected, then this step is not required.

5. Enter the desired static IP address or the IP address provided by the network administrator. If the computer does not require Internet access or if a statically-assigned IP address is being used, then an address within the IPv4 address block `169.254.xxx.xxx/16` can be entered.
6. Set the subnet mask to `255.255.0.0`.
7. Click the **OK** button then close all **Control Panel** windows.

Device Operation

LED Indicators

The LED indicators on the front/back of the unit provide basic information on the current status of the AT-HDR-CAT-4ED.

LED	Description	
POWER	Blue 	Unit is powered and in normal operating mode.
	Red 	Unit is in standby mode. <ul style="list-style-type: none"> Press the POWER button to place the unit in normal operating mode.
	Off 	Unit is not powered. <ul style="list-style-type: none"> Check the power supply and make sure it is securely fastened to the locking connector on the rear of the unit. Make sure that the power supply is connected to an available electrical outlet and that the outlet is “live” (some outlets are controlled by a wall switch).
HDMI IN / OUT	Blue 	IN: Source is connected to the HDMI IN port. OUT: Sink device is connected to the HDMI OUT port.
	Off 	IN: No source device connected to the HDMI IN port. OUT: No sink device is connected to the HDMI OUT port. <ul style="list-style-type: none"> Check the integrity of the HDMI cable; make sure a secure connection exists between the HDMI port on the AT-HDR-CAT-4ED and the source/display device. Try a different HDMI cable.
HDBaseT 1 / 2	Blue 	Normal operation. Signal integrity between the AT-HDR-CAT-4ED and the connected receiver is good. <i>Note that when connected to an HDBaseT receiver, with an active sink, the LED indicator will be blue. If no active sink is connected, or the sink is powered off, then the indicator will not be illuminated.</i>
	Off 	No connection between the HDBaseT port on the AT-HDR-CAT-4ED and the receiver unit. <ul style="list-style-type: none"> Check the Ethernet cable for a secure connection. Possible bad cable; try a different Ethernet cable.
LOCK	Blue 	Front-panel buttons on the AT-HDR-CAT-4ED are locked. Refer to the API or Locking / Unlocking the Front Panel (page 18) for more information.
	Flashing Blue 	The number of flashes indicate whether the unit is in DHCP or static IP mode. Refer to IP Configuration (page 12) for more information.
	Off 	Front-panel buttons on the AT-HDR-CAT-4ED are unlocked.
INT	Blue 	AT-HDR-CAT-4ED is using the internal EDID. Refer to EDID Management (page 19) for more information on INT EDID mode.
	Off 	AT-HDR-CAT-4ED is set to LEARN EDID mode.
LEARN	Blue 	AT-HDR-CAT-4ED is in “learn” mode. Refer to EDID Management (page 19) for more information on LEARN EDID mode.
	Flashing Blue 	AT-HDR-CAT-4ED is in the process of learning the downstream EDID.
	Off 	AT-HDR-CAT-4ED is set to INT (internal EDID) mode.


Logging in to the Web Server

Most of the AT-HDR-CAT-4ED operation is handled through the built-in web server. In order to access the web server, the IP address of the unit must be known. Refer to [IP Configuration \(page 12\)](#) for more information.

Login Registration

Before the built-in web server can be accessed, a username and password must be created.

1. Launch the desired web browser and enter the IP address of the AT-HDR-CAT-4ED in the address bar.
2. The AT-HDR-CAT-4ED **Register** page will be displayed.

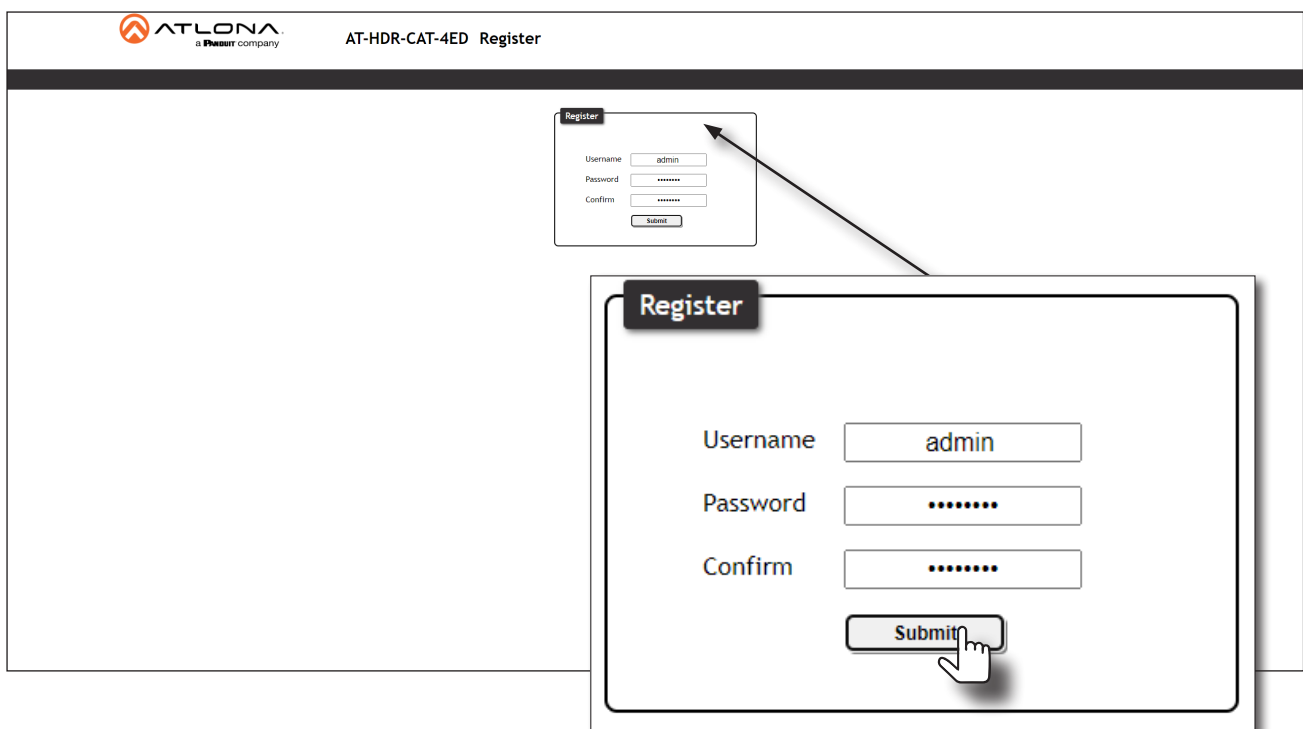

The screenshot shows the AT-HDR-CAT-4ED Register page. At the top left is the ATLONA logo and 'a PANDUIT company'. The page title is 'AT-HDR-CAT-4ED Register'. The main content area contains a registration form with the following fields: Username (containing 'admin'), Password (masked with dots), and Confirm (masked with dots). Below these fields is a 'Submit' button. A callout box highlights the form fields, and a hand cursor is shown clicking the Submit button.

3. Enter the desired username in the **Username** field. In the example above, the username `admin` is used.
4. Enter the desired password in the **Password** field.




IMPORTANT: The password must contain a minimum of 8 characters, including: 1 uppercase character, 1 lowercase character, and 1 number. Special characters are not permitted. Note that the **Password** and **Confirm** fields will be masked when entering the password.

5. Verify the password by entering it in the **Confirm** field.
6. Click the **Submit** button.
7. The **Login** screen will be displayed.
8. The login registration process is complete.

Logging in after Registration

1. Launch the desired web browser and enter the IP address of the AT-HDR-CAT-4ED in the address bar.
2. Enter the correct username and password in the respective fields.
3. Click the **Submit** button.

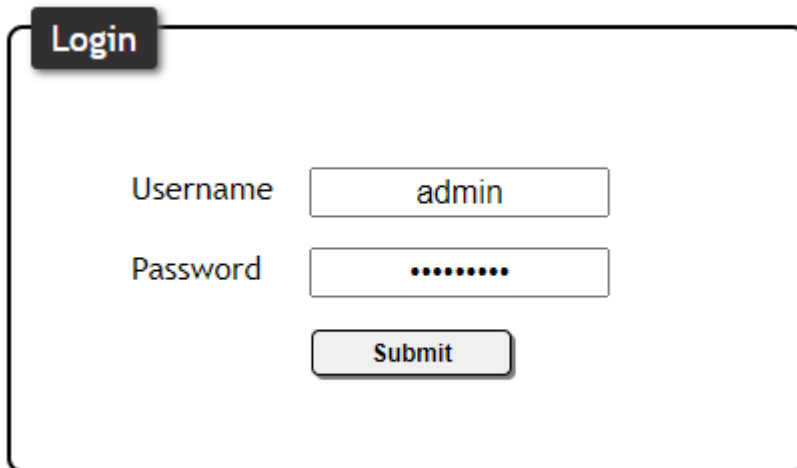

The image shows a login form with a dark grey header containing the word "Login" in white. Below the header, there are two input fields. The first is labeled "Username" and contains the text "admin". The second is labeled "Password" and contains a series of ten black dots. Below these fields is a button labeled "Submit".

4. The **Info** page will be displayed and the login process is complete. Refer to [Info page \(page 40\)](#) for more information.


Locking / Unlocking the Front Panel

The buttons on the front panel can be locked or unlocked. Locking the front-panel buttons prevents accidental pressing of the buttons, which may occur when the unit is mounted in a rack environment. Locking and unlocking of the front-panel buttons is managed through the web server or by executing the `Lock` and `Unlock` API commands. Refer to the API documentation for more information.

NOTE: Locking the front-panel buttons will also lock the EDID, preventing the EDID mode from being switched between **INT** and **LEARN** modes.



Using the Front Panel

1. Make sure the unit is powered.
2. Press and hold the **POWER** button for five seconds.
3. Release the **POWER** button. The **LOCK** LED indicator on the front panel will glow solid blue. The front panel buttons are now locked.
4. To unlock the front-panel buttons, press and hold the **POWER** button for five seconds, then release. The **LOCK** LED indicator will no longer be illuminated.

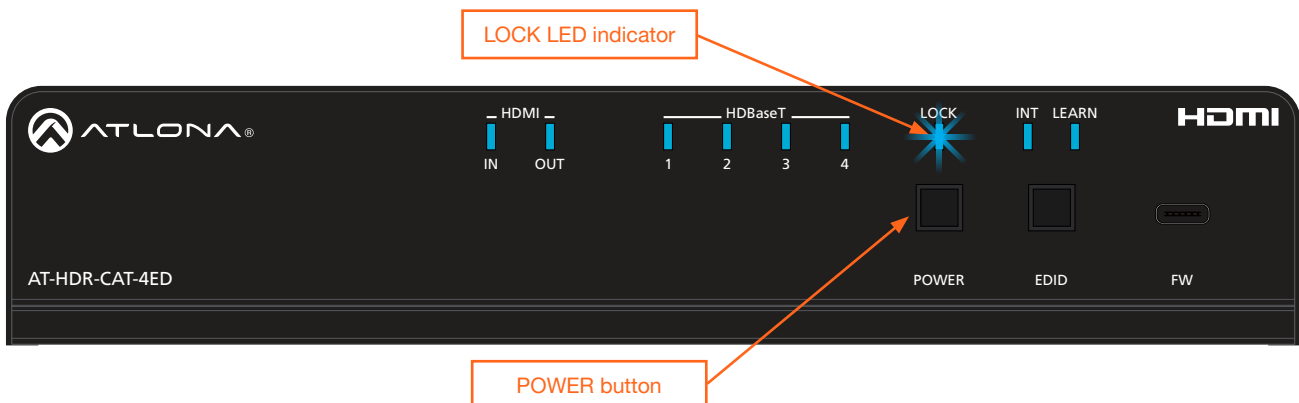

Using the Web Server

1. Log in to the web server.
2. Click **System** in the menu bar.
3. Locate the **System** section and click the **Lock** toggle button to switch between **LOCK** and **UNLOCK** states.

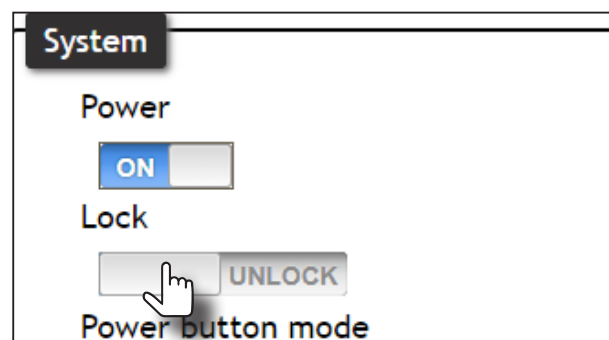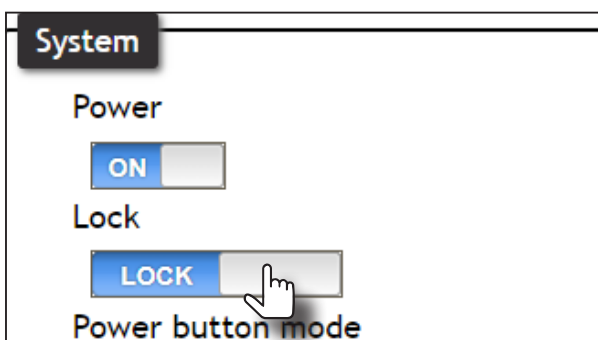

4. The **LOCK** LED indicator, on the front panel, will reflect the current state. When the front-panel buttons are locked, the **LOCK** LED indicator will glow solid blue.

EDID Management

The AT-HDR-CAT-4ED provides two EDID modes: **INT** and **LEARN**. The default EDID mode is **INT** mode. In this mode, the AT-HDR-CAT-4ED will automatically create an EDID based on the capabilities of all connected displays. **INT** mode is recommended for the best results when the capabilities of all connected displays are unknown. **INT** mode can also be used to select any of 9 EDID presets. Refer to [Selecting EDID Presets \(page 21\)](#) for more information on this topic. **LEARN** mode can be used to capture an EDID from any sink device. Once the EDID is learned, it will be used by the connected source device to determine what video and audio formats can be sent to the sink device.


Learning an EDID using the Front Panel




IMPORTANT: In order for EDID learning to take place, a display must be connected to **HDBaseT OUT 1**.

1. Power the AT-HDR-CAT-4ED.
2. Connect an Ethernet cable from the **HDBaseT OUT 1** port on the AT-HDR-CAT-4ED to a receiver (e.g. AT-HDR-EX-100CEA-RX).

3. Connect an HDMI cable from the receiver to the display (sink) device. Make sure that the sink device is powered.

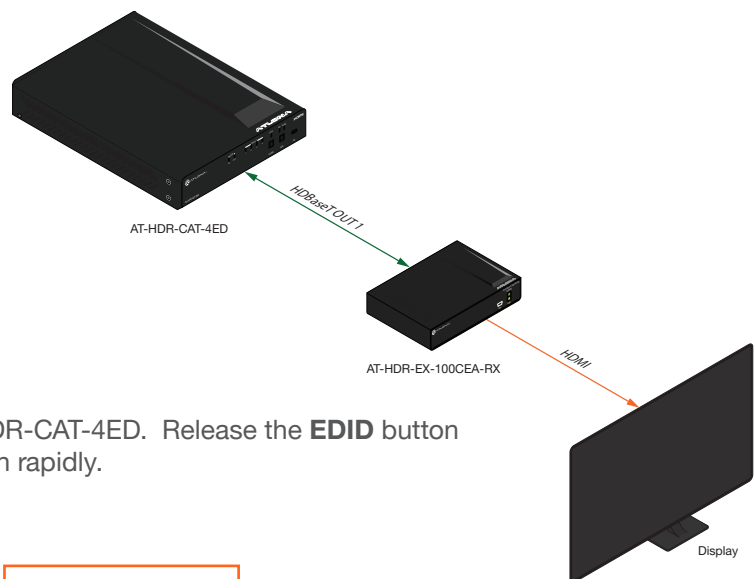

4. Press and hold the **EDID** button on the AT-HDR-CAT-4ED. Release the **EDID** button once the **LEARN** LED indicator begins to flash rapidly.

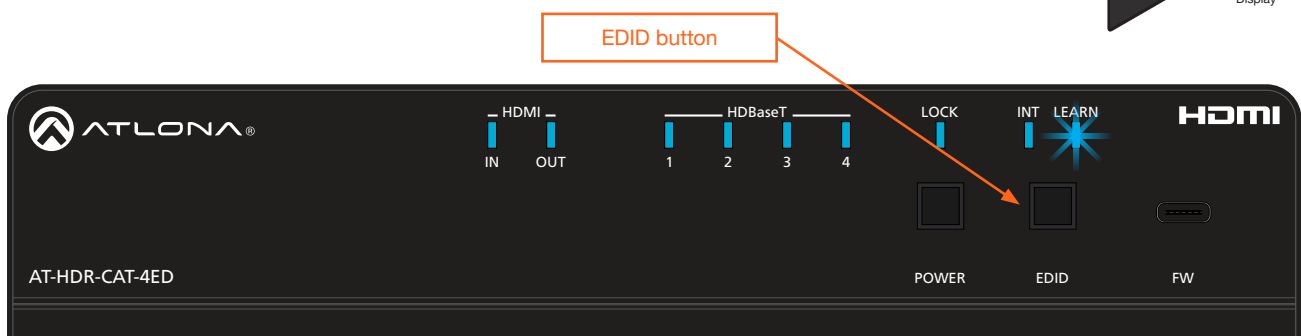


Once the EDID is learned, it will be used by the connected source device to determine what video and audio formats can be sent to the sink device(s). To switch back to **INT** mode, quickly press and release the **EDID** button.



NOTE: If the AT-HDR-CAT-4ED is accidentally switched to **INT** mode, quickly press and release the **EDID** button to switch back to **LEARN** mode. Switching back and forth between **INT** and **LEARN** mode will not erase the “learned” EDID. In addition, switching to **LEARN** mode cannot be performed if an EDID has not been learned.

Learning the EDID using the Web Server

1. Follow steps 1 through 3 under [Learning an EDID using the Front Panel \(page 19\)](#).
2. Log in to the web server.
3. Click **EDID** in the menu bar.

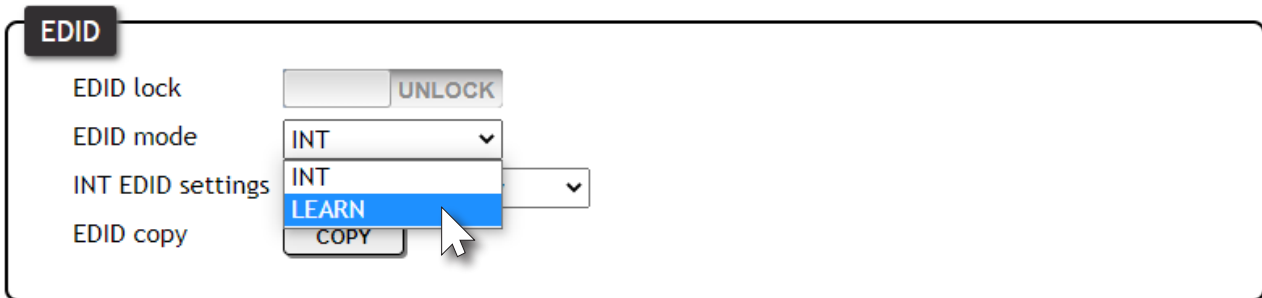

4. Click the **EDID mode** drop-down list and select **LEARN**.
5. Click the **COPY** button to copy the downstream EDID to memory.

The AT-HDR-CAT-4ED will now use the EDID of the downstream sink. To switch back to the **INT** mode, click the **EDID mode** drop-down list and select **INT**.



i NOTE: The **COPY** button will be disabled if there is no display connected to **HDBaseT OUT 1**.

Locking the EDID

To prevent accidental switching between **INT** and **LEARN** modes, the EDID can be locked.

i NOTE: Locking the EDID will also lock all front-panel buttons.

1. Log in to the web server.
2. Click **EDID** in the menu bar.
3. Click the **EDID lock** toggle button to switch between **LOCK** and **UNLOCK** states.

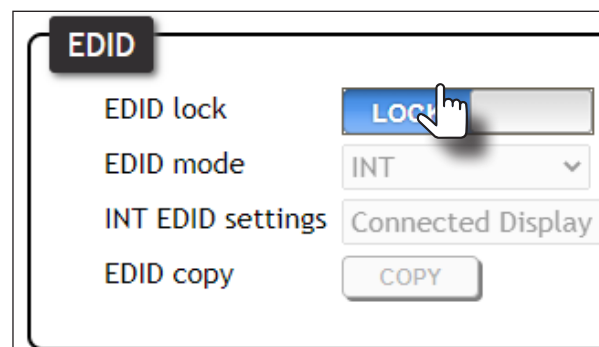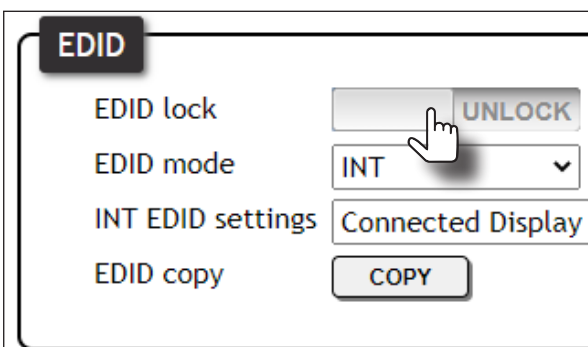

4. The **LOCK** LED indicator, on the front panel, will reflect the current state. When the EDID is locked, the **LOCK** LED indicator will glow solid blue. This also serves to indicate that all front-panel buttons are locked.

Selecting EDID Presets


The AT-HDR-CAT-4ED comes with a default EDID plus 8 pre-programmed EDID selections. When selecting the default or one of the pre-programmed EDID selections, the EDID mode must be set to **INT** (internal) mode. Available EDID selections are presented in the table below. All resolutions are 60 Hz.

EDID	Description
Connected Display	Uses the downstream EDID of the connected display
ATL 4K60 MCH	3840 x 2160 (UHD) with multichannel audio support
ATL 4K60 PCM MCH	3840 x 2160 (UHD) with PCM multichannel audio support
ATL 1080P MCH	1920 x 1080p with multichannel audio support
ATL 1080P 2CH	1920 x 1080p with two-channel audio support
ATL 1080P DD	1920 x 1080p with Dolby™ Digital audio support
ATL 1080P DVI	1920 x 1080p for DVI displays
ATL 720P DD	1280 x 720p with Dolby™ Digital audio support
ATL 720P 2CH	1280 x 720p with two-channel audio support



NOTE: If the resolution and timing limitations of both displays, connected to the **HDBaseT OUT** port, are unknown, then select the **Connected Display** EDID for the best compatibility. The **Connected Display** EDID will automatically build an EDID based on the capabilities of both displays. When selecting an EDID, make sure both connected displays can support the resolution and timing information. Otherwise, loss of picture and/or audio may result.

1. Log in to the web server.
2. Click **EDID** in the menu bar.
3. Make sure the **EDID lock** toggle switch is set to **UNLOCK**.
4. Click the **EDID mode** drop-down list and select **INT**.
5. Select the desired EDID from the **INT EDID settings** drop-down list. The selected EDID will be used by the source, before sending A/V data to the display (sink) device.

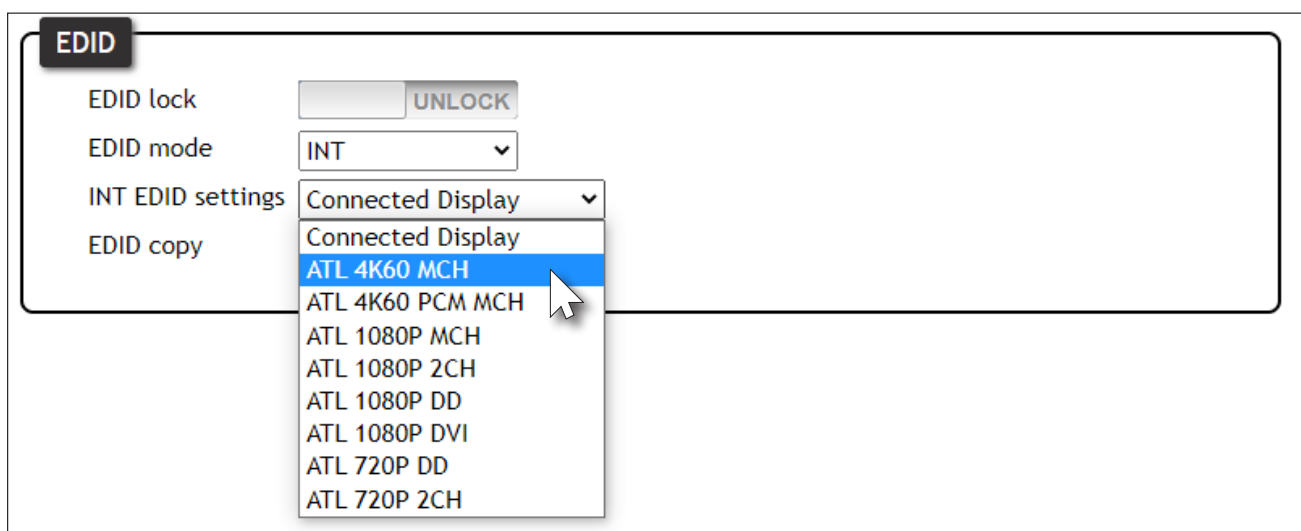

Changing Login Credentials


The AT-HDR-CAT-4ED allows both the username and password to be changed. These credentials apply to both the built-in web server and Telnet sessions.



NOTE: When creating passwords, special characters are not supported. Password fields will always be masked for security purposes.

Changing the Username and Password

1. Log in to the web server.
2. Click **Config** in the menu bar.
3. Click the **Old Username** field and enter the current username.

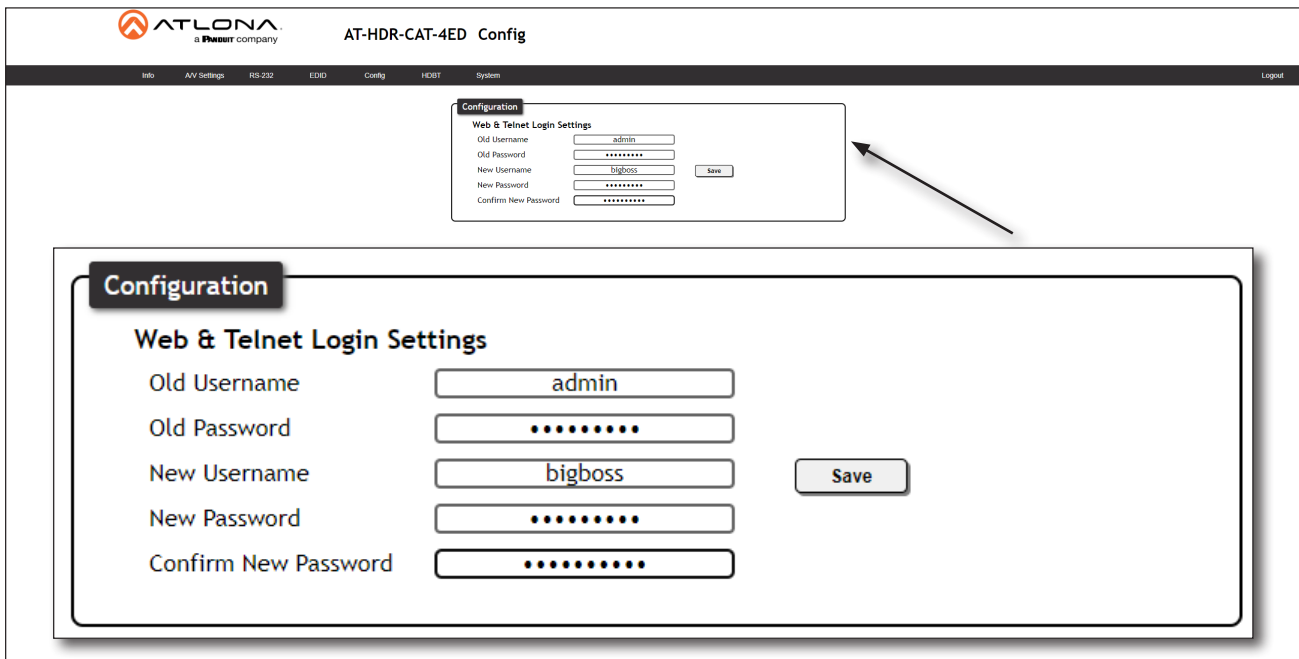

The screenshot shows the AT-HDR-CAT-4ED configuration interface. At the top, there is a navigation bar with 'Info', 'AV Settings', 'RS-232', 'EDID', 'Config', 'HDMI', and 'System'. The main content area is titled 'AT-HDR-CAT-4ED Config'. A callout box labeled 'Configuration' points to the 'Web & Telnet Login Settings' form. The form contains the following fields and values:

Field	Value
Old Username	admin
Old Password	*****
New Username	bigboss
New Password	*****
Confirm New Password	*****

A 'Save' button is located to the right of the form fields.

4. Enter the current password in the **Old Password** field.
5. Enter the new username in the **New Username** field.
6. Enter the new password in the **New Password** field.
7. Retype the new password in the **Confirm New Password** field.
8. Click the **Save** button to commit changes. To log in with the new username, click **Logout** in the upper-right corner of the screen, then enter the new password on the **Login** page.

Controlling Audio Output

The AT-HDR-CAT-4ED features a separate **AUDIO OUT** port on the rear panel. This port provides de-embedding and conversion of two-channel LPCM audio streams to analog audio. Audio output volume can be controlled using API commands or the built-in web server.



IMPORTANT: The AT-HDR-CAT-4ED will only de-embed two-channel LPCM audio. Down-mixing multichannel audio to two-channel audio is not supported. In addition, video must accompany the audio at all times. This product does not support audio-only (“free-run” mode) output.


Audio Port Wiring

The included 5-pin captive screw block can be wired to support balanced audio using XLR connectors, or unbalanced audio using RCA connectors.

Balanced Audio (XLR)

Channel	Signal (AT-HDR-CAT-4ED)	Pin (XLR)
R	-	3
R	+	2
--	GND*	1
L	+	2
L	-	3


*The **GND** signal, from the 5-pin captive screw connector on the AT-HDR-CAT-4ED, should be tied to pin 1 on *both* XLR connectors.

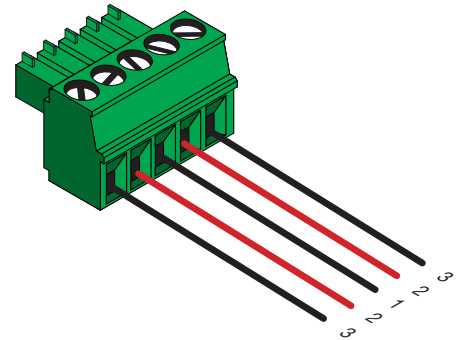

Unbalanced Audio (RCA)


Channel	Signal (AT-HDR-CAT-4ED)	Pin (RCA)
R	to GND*	--
R	+	+
--	GND	GND
L	+	+
L	to GND*	--

*The **GND** signal, from the captive screw connector on the AT-HDR-CAT-4ED, should be tied to **L-** and **R-** on the captive screw connector.

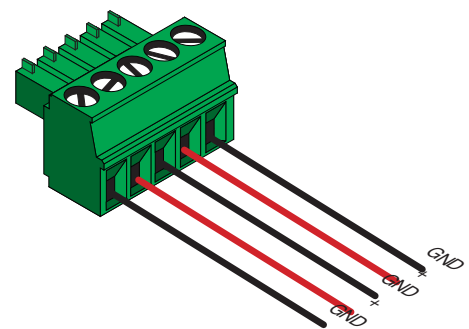


De-Embedding Audio

1. Log in to the web server.
2. Click **A/V Settings** in the menu bar.
3. Click **Analog Output** toggle switch and set to the **ON** position. To mute the audio output on the **AUDIO OUT** port, click this toggle switch to the **OFF** position.

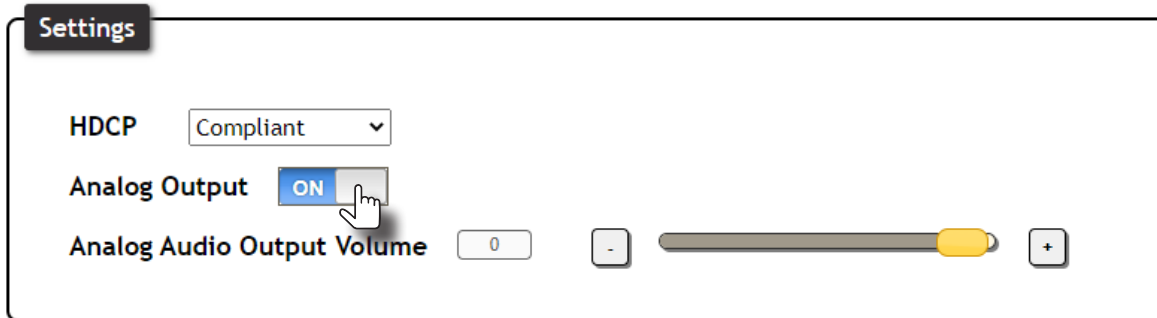

Adjusting the Volume Level

1. Log in to the web server.
2. Click **A/V Settings** in the menu bar.
3. Click and drag the **Analog Audio Output Volume** slider to the right to increase the output level. Drag the slider to the left to decrease the output level.

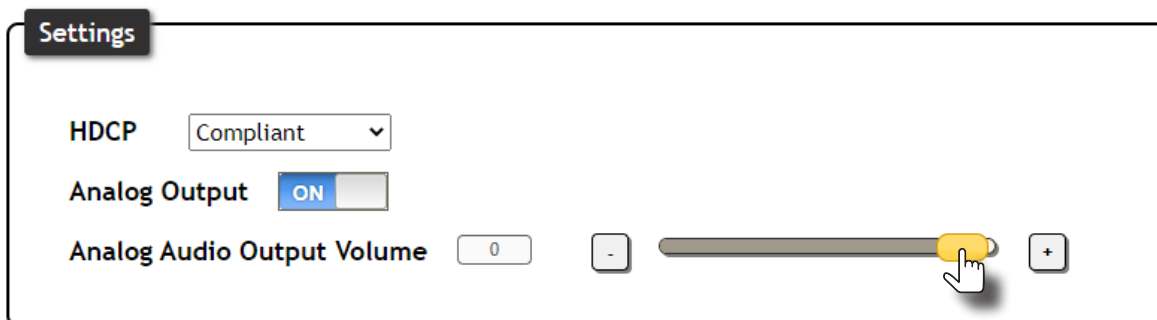

RS-232 Control

The AT-HDR-CAT-4ED provides two methods of RS-232 control: Pass-through mode and control mode. The **MASTER RS-232 / IR** port, allows the unit to be directly controlled using a control system. In addition four pass-through **RS-232 / IR** ports allow sink devices, at the viewing location, to be controlled using a control system.

RS-232 is serial data protocol that allows Data Terminal Equipment (DTE) devices, such as a computer or control system, to communicate with Data Communication Equipment (DCE) devices, such as the AT-HDR-CAT-4ED or a display. Although IP control is available, RS-232 still plays an integral part of many control systems. The 25-pin D-type connector (DB-25) was defined as the RS-232 standard, but is now commonly implemented in a nine-pin (DE-9) connector package. Each pin is numbered, as shown below.



DTE Pin Descriptions

Pin	Signal	Description
1	DCD	Data Carrier Detect
2	RxD	Receive Data
3	TxD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Ground (Signal)
6	DSR	Data Set Ready
7	RTS	Request to Send
8	CTS	Clear to Send
9	RI	Ring Indicator

DCE Pin Descriptions

Pin	Signal	Description
1	DCD	Data Carrier Detect
2	TxD	Transmit Data
3	RxD	Receive Data
4	DSR	Data Set Ready
5	GND	Ground (Signal)
6	DTR	Data Terminal Ready
7	CTS	Clear to Send
8	RTS	Ready to Send
9	RI	Ring Indicator

RS-232 Port Wiring



When connecting a DTE device to a DCE device, a *straight-through* cable should be used. A straight-through cable is wired in such a way that the pins on one side of the cable are connected to the corresponding pins on the opposite side of the cable, as shown in the table below. However, the AT-HDR-CAT-4ED will use only TxD, RxD, and GND signals when communicating with a control system or computer. Refer to connection instructions on the next page.

Straight-Through Cable

Pin	Signal		Signal	Pin
1	DCD	←→	DCD	1
2	RxD	←→	TxD	2
3	TxD	←→	RxD	3
4	DTR	←→	DSR	4
5	GND	←→	GND	5
6	DSR	←→	DTR	6
7	RTS	←→	CTS	7
8	CTS	←→	RTS	8
9	RI	←→	RI	9

Device Operation

1. Identify the DE-9 connector that will be attached to the control system or computer (DCE) equipment.
2. Remove the DE-9 connector at the opposite end of the cable with wire cutters.
3. Remove at least 1" of the cable insulation to expose each of the nine wires.
4. Locate a multimeter and set it to the "continuity" function.
5. Attach one of the leads from the multimeter to pin 2 on the DE-9 connector.
6. Take the other lead and probe each of the wires on the opposite end of the cable. When the wire connected to that pin is detected, the multimeter will emit an audible tone. Once this occurs, identify the current wire, and move it to the side.
7. Repeat step 6 for pin 3 and pin 5 on the DE-9 connector.
8. Group the remaining wires and pull them aside. Electrical tape can be use to secure the wires to the outside of the RS-232 cable.
9. Remove at least 3/16" (5 mm) of insulation from the TxD, RxD, and GND wires.

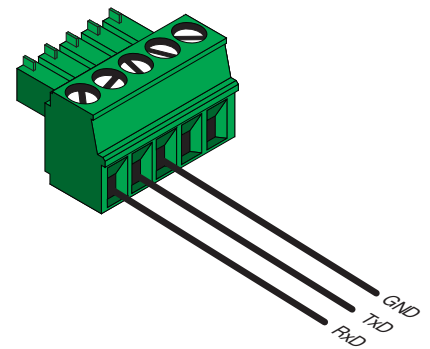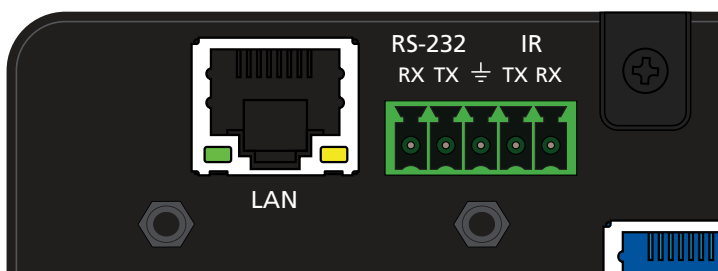


10. Locate the included 5-pin captive screw block and open each of the terminals by turning the screws counter-clockwise, using a small regular screwdriver.
11. Insert the TxD, RxD, and GND wires into correct terminal, as shown, and tighten the screws to secure each wire. Do not overtighten.

Pass-through mode

In pass-through mode, RS-232 commands are passed-through the AT-HDR-CAT-4ED, transmitted over HDBaseT to a receiver unit, and then to the display (sink) device. Note that each **RS-232 / IR** port is assigned to an **HDBaseT OUT** port. This assignment is fixed and cannot be changed, as shown in the table below.

RS-232 / IR Port	HDBaseT Port
RS-232 / IR 1	HDBaseT OUT 1
RS-232 / IR 2	HDBaseT OUT 2
RS-232 / IR 3	HDBaseT OUT 3
RS-232 / IR 4	HDBaseT OUT 4


1. Connect the RS-232 cable from the control system to the desired **RS-232 / IR** port on the AT-HDR-CAT-4ED. Refer to [RS-232 Port Wiring \(page 25\)](#) for instructions on preparing the cable.
2. Connect an Ethernet cable from the desired **HDBaseT OUT** port to a receiver. In this example, the HDBaseT cable is connected from **HDBaseT OUT 2** to a compatible receiver (the RS-232 cable is connected from the control system to the **RS-232 / IR 2** port).
3. Connect an RS-232 cable between the display (sink) and the receiver.
4. Adjust the RS-232 settings on the control system to match the requirements of the sink device. For example, if the RS-232 settings for the display device are 9600, N, 8, 1, then set the control system to the same settings. If the control system and sink device settings do not match, then RS-232 control will not function.

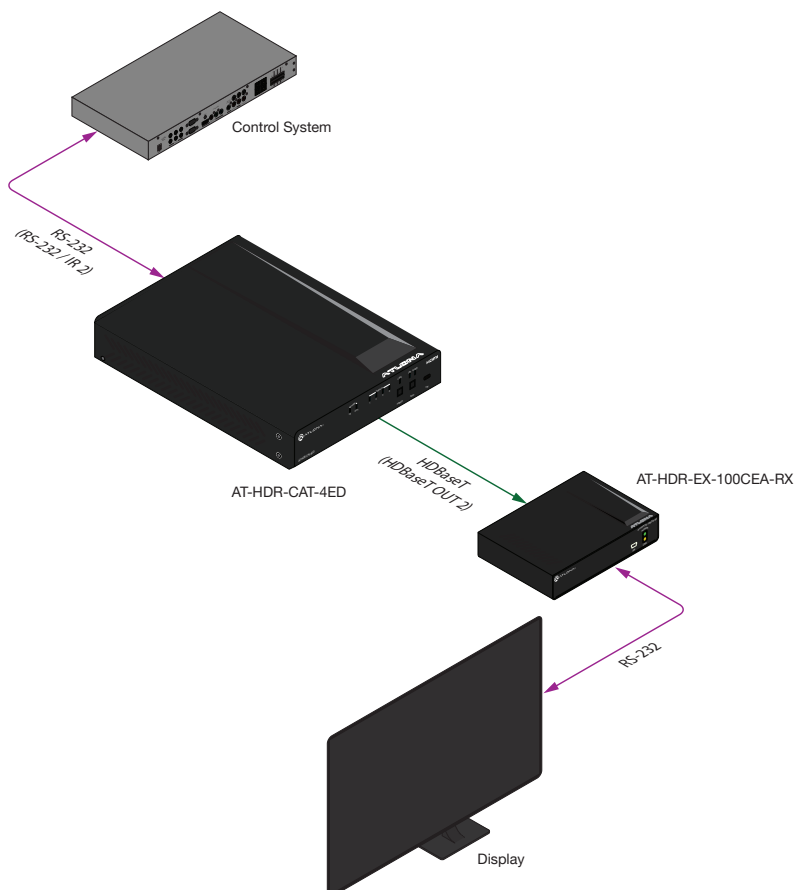


Control mode

In control mode, the **MASTER RS-232 / IR** port is used to directly control the AT-HDR-CAT-4ED using a control system.

1. Launch a web browser and log in to the web server.
2. Connect the RS-232 cable between the control system and the **MASTER RS-232 / IR** port on the AT-HDR-CAT-4ED. Refer to [RS-232 Port Wiring \(page 25\)](#) for instructions on preparing the cable.

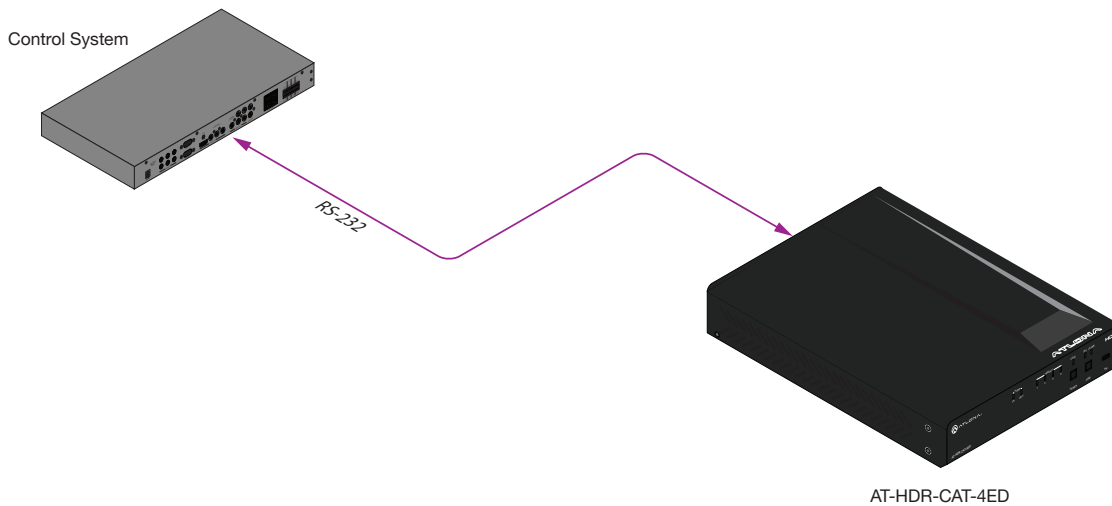

3. Click **RS-232** in the menu bar.
4. Select the proper baud rate, data bit, parity, and stop bit settings. These settings must correspond with the control system RS-232 settings.

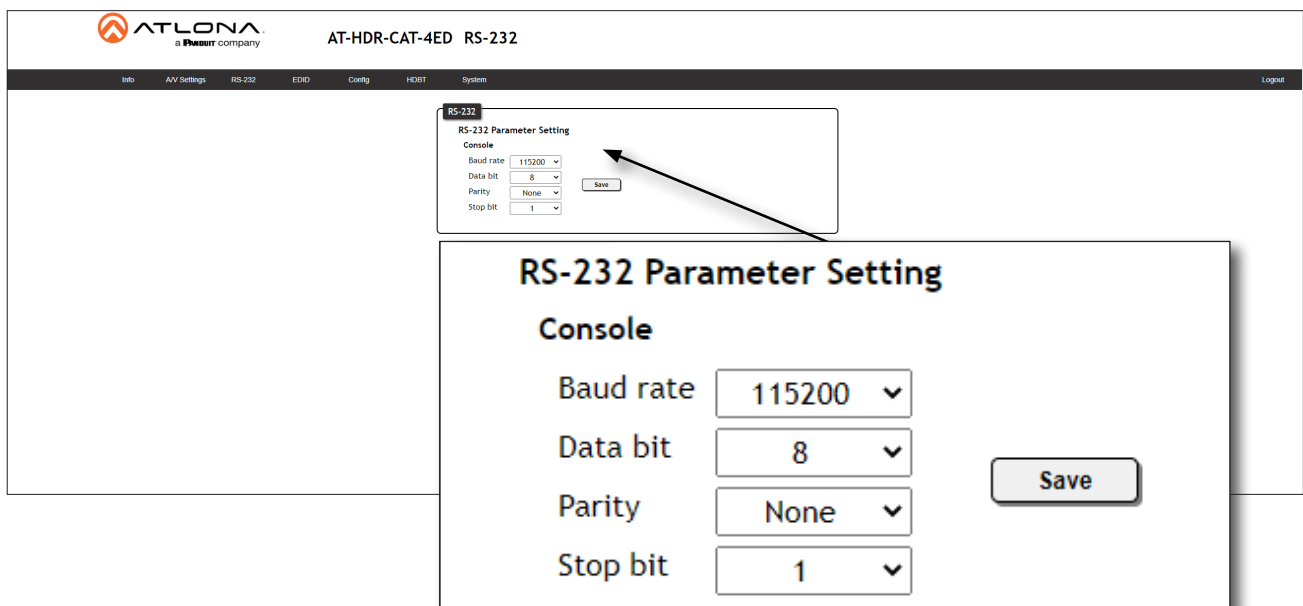

The screenshot shows the web interface for the AT-HDR-CAT-4ED. The top navigation bar includes 'Info', 'AV Settings', 'RS-232', 'EDID', 'Contg', 'HDBT', and 'System'. The 'RS-232' menu item is highlighted. A pop-up window titled 'RS-232 Parameter Setting' is displayed, showing the following settings:

RS-232 Parameter Setting	
Console	
Baud rate	115200
Data bit	8
Parity	None
Stop bit	1
<input type="button" value="Save"/>	

5. Click the **Save** button to commit changes.



IR Control

IR can be used to control either source devices at the headend or devices connected to the receiver endpoint, such as a display. Note that the **MASTER RS-232 / IR** port does *not* support IR control. Each **RS-232 / IR** port is assigned to an **HDBaseT OUT** port. This assignment is fixed and cannot be changed, as shown in the table below. IR is compatible with frequencies from 30 kHz to 60 kHz.


RS-232 / IR Port	HDBaseT Port
RS-232 / IR 1	HDBaseT OUT 1
RS-232 / IR 2	HDBaseT OUT 2
RS-232 / IR 3	HDBaseT OUT 3
RS-232 / IR 4	HDBaseT OUT 4

Controlling Display Devices

1. Remove at least 3/16" (5 mm) of insulation from the TX and GND wires.
2. Locate the included 5-pin captive screw block and open each of the terminals by turning the screws counter-clockwise, using a small regular screwdriver.
3. Insert the TX and GND wires into correct terminal, as shown, and tighten the screws to secure each wire. Do not overtighten.
4. Connect the captive screw connector to the **RS-232 / IR IN** port of the zone to be controlled.
5. Connect the RX terminal, from the AT-HDR-CAT-4ED, to the TX terminal on the control system.
6. Connect the GND terminal, from the AT-HDR-CAT-4ED, to the GND terminal on the control system.

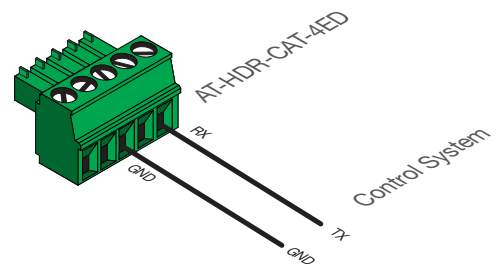
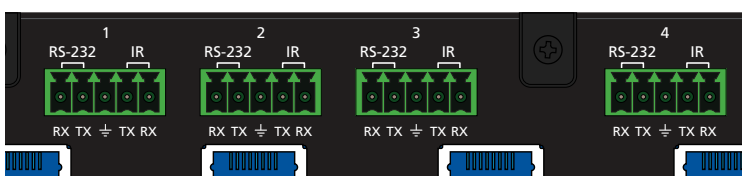


7. Connect the IR emitter to the receiver and place the emitter next to the display (sink) device, as shown in the illustration below.

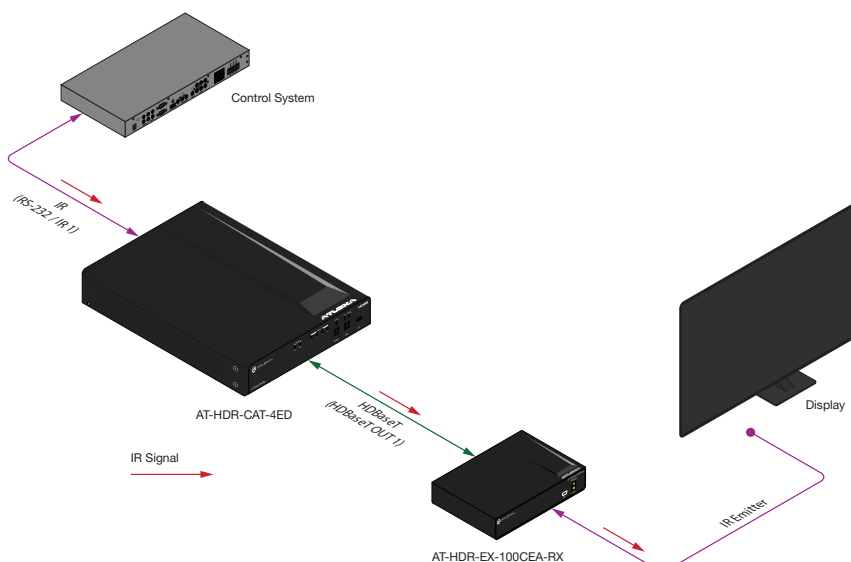


Controlling Source Devices

1. Remove at least 3/16" (5 mm) of insulation from the RX and GND wires of the emitter.
2. Locate the included 5-pin captive screw block and open each of the terminals by turning the screws counter-clockwise, using a small regular screwdriver.
3. Insert the S (signal) lead of the IR emitter to the TX terminal on the AT-HDR-CAT-4ED captive screw connector. Tighten the screw to secure the wire but do not overtighten.
4. Insert the GND lead of the IR emitter to the GND terminal on the AT-HDR-CAT-4ED captive screw connector. Tighten the screw to secure the wire but do not overtighten.
5. Connect the captive screw connector to the **RS-232 / IR IN** port of the zone to be controlled.

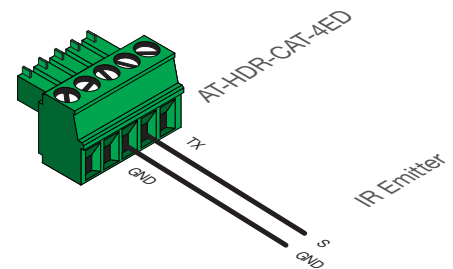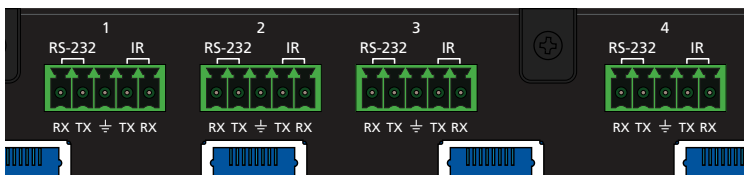

6. Place the IR emitter next to the source device, as shown in the illustration below.

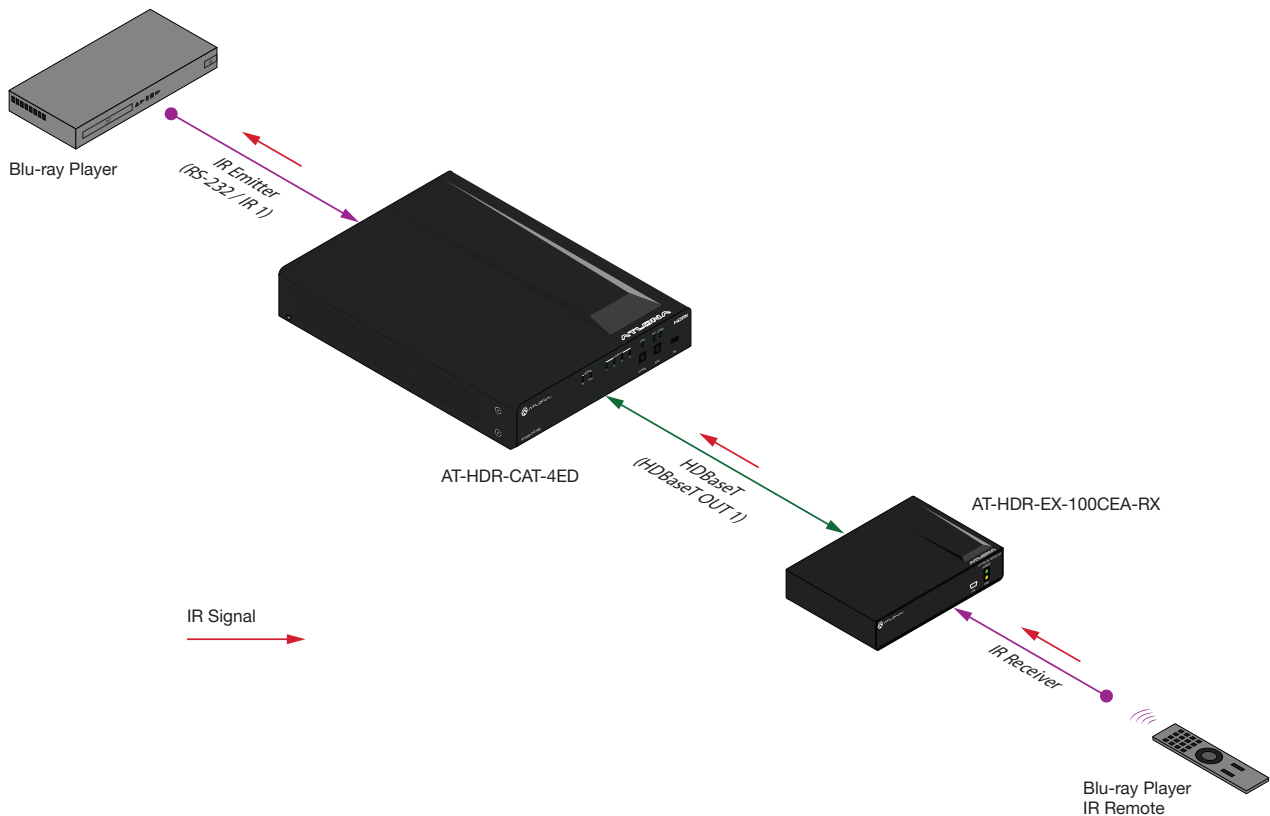


Power Button Modes

The main function of the **POWER** button on the front panel is to toggle the AT-HDR-CAT-4ED between standby and normal operating mode. This is the default mode. However, this button can also be defined to send CEC power-on and power-off commands, over HDBaseT, to the display (sink) devices. It can also be defined to simultaneously power-on or power-off the AT-HDR-CAT-4ED and any connected displays.

Normal Operation

By default, pressing the **POWER** button will toggle the power state of the AT-HDR-CAT-4ED. When the unit is in normal operating mode, the **POWER** button will be blue. Pressing the **POWER** button again, will place the unit into standby mode, and the **POWER** button will be red. In standby mode, no video signal will pass to the display (sink) device. However, TCP/IP access to the unit will be maintained, allowing access to the web server and Telnet sessions.


1. Launch a web browser and log in to the web server.
2. Click **System** in the menu bar.
3. Click the **Power button mode** drop-down list and select **DA standby**. Pressing the **POWER** button on the front panel will toggle between power-on and standby modes on the AT-HDR-CAT-4ED. Connected display (sink) devices will not receive CEC power-on / power-off messages.

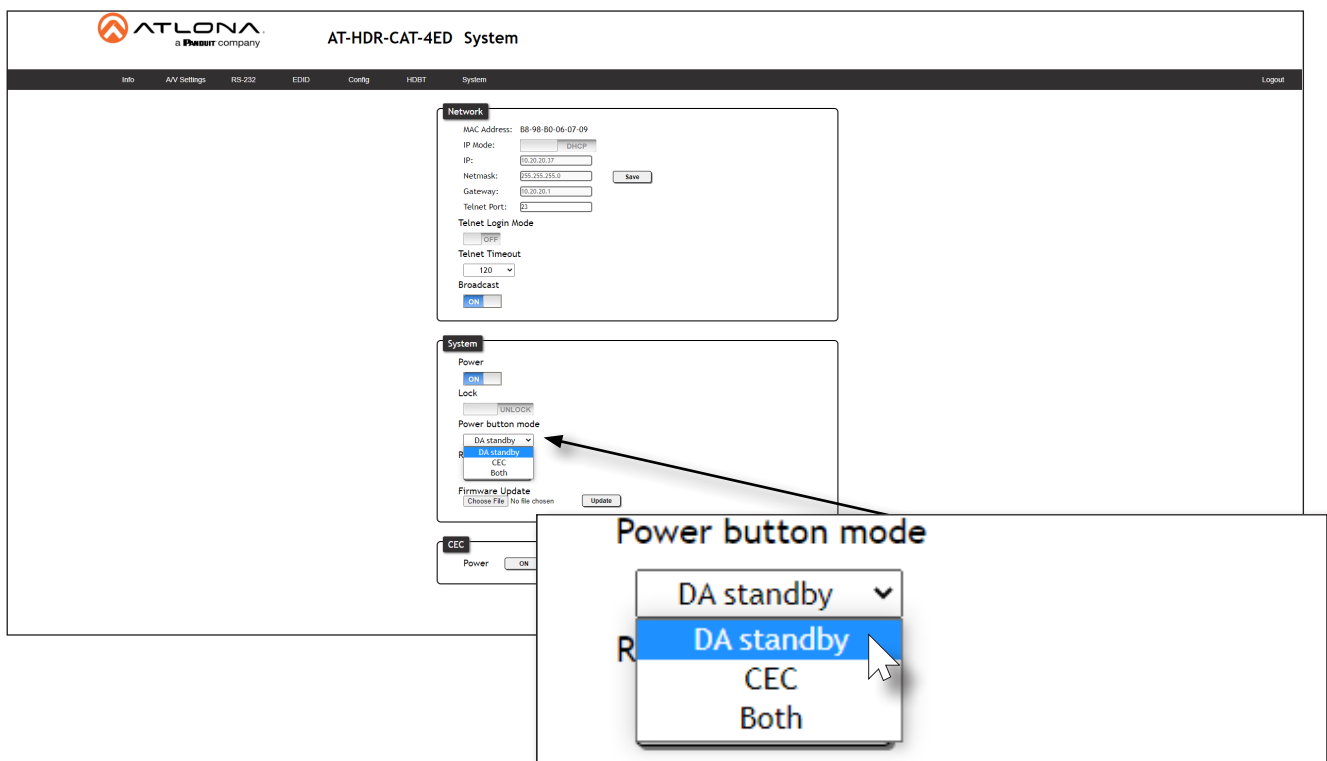

Powering Sink Devices


This section provides information on how to power-on / power-off the display (sink) device, using the **POWER** button. CEC* power-on / power-off commands are transmitted over both **HDBaseT OUT** ports, as well as the pass-through **HDMI OUT** port.

1. Connect Ethernet cables from the **HDBaseT OUT** ports to receiver (e.g. AT-HDR-EX-100CEA-RX).
2. Connect an HDMI cable from the receiver to the display (sink) device. Make sure that the sink device is powered.

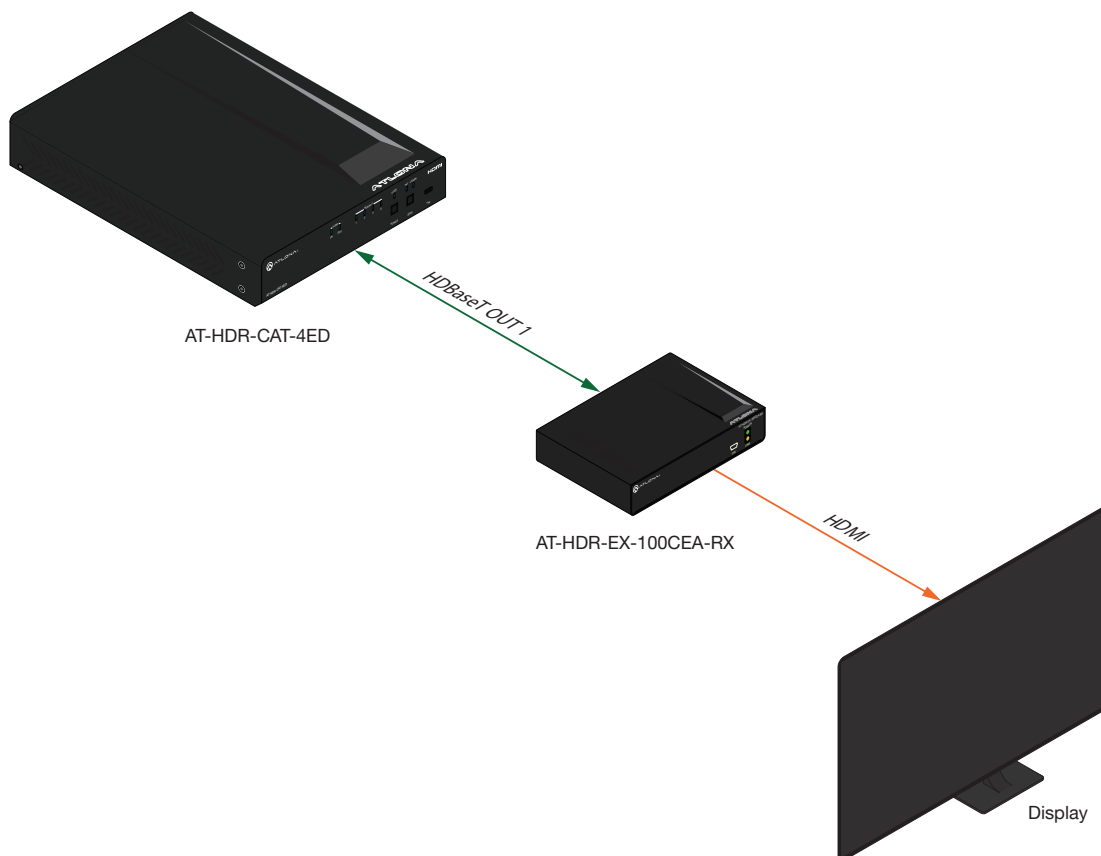

3. Launch a web browser and log in to the web server.
4. Click **System** in the menu bar.
5. Click the **Power button mode** drop-down list and select **CEC**. Refer to the illustration on the next page.

**Consumer Electronics Control (CEC): Atlona has confirmed proper CEC functionality with several current models of Samsung, Panasonic, and Sony displays. However, it is not guaranteed that CEC will work with all displays. Many manufacturers do not support the CEC "off" command, and older displays use proprietary commands. Atlona only supports displays that use the CEC command structure defined in HDMI 1.2a. It is recommended that dealers request an evaluation product from Atlona, before designing a system using the CEC protocol. If this is not possible, then other control methods will need to be considered, in order to control displays using Atlona products.*

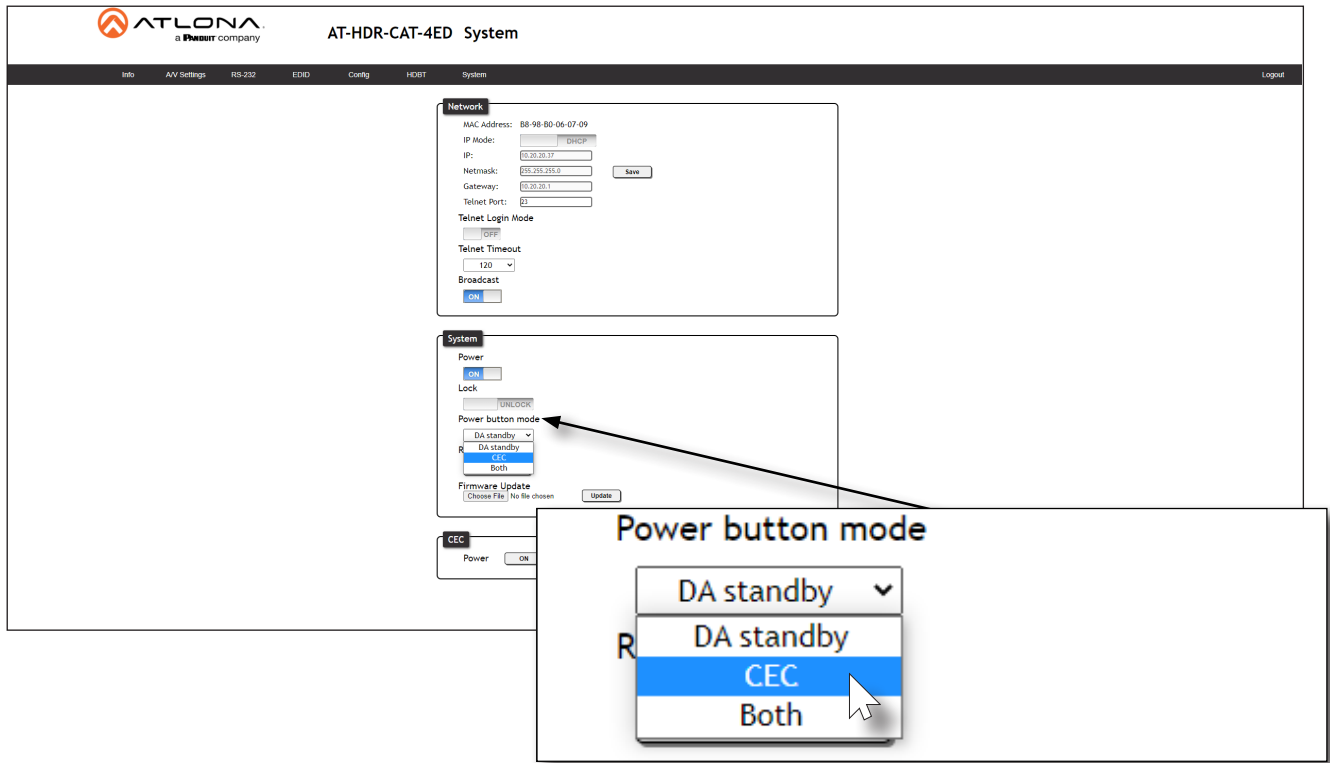

- Test the CEC power-on and power-off commands by clicking the **ON** and **OFF** buttons, near the bottom of the page.




- Press the **POWER** button on the front panel to power-on or power-off the display. Note that the power state of the AT-HDR-CAT-4ED will be unaffected.


Powering Sinks and the AT-HDR-CAT-4ED

In this mode, the **POWER** button will power-on / power-off the unit and the connected displays. CEC* power-on / power-off commands are transmitted over both **HDBaseT OUT** ports.

1. Make the proper connections by following steps 1 and 2, under [Powering Sink Devices \(page 32\)](#).
2. Launch a web browser and log in to the web server. Refer to [Introduction to the Web Server \(page 29\)](#) for more information.
3. Click the **Power button mode** drop-down list and select **Both**.

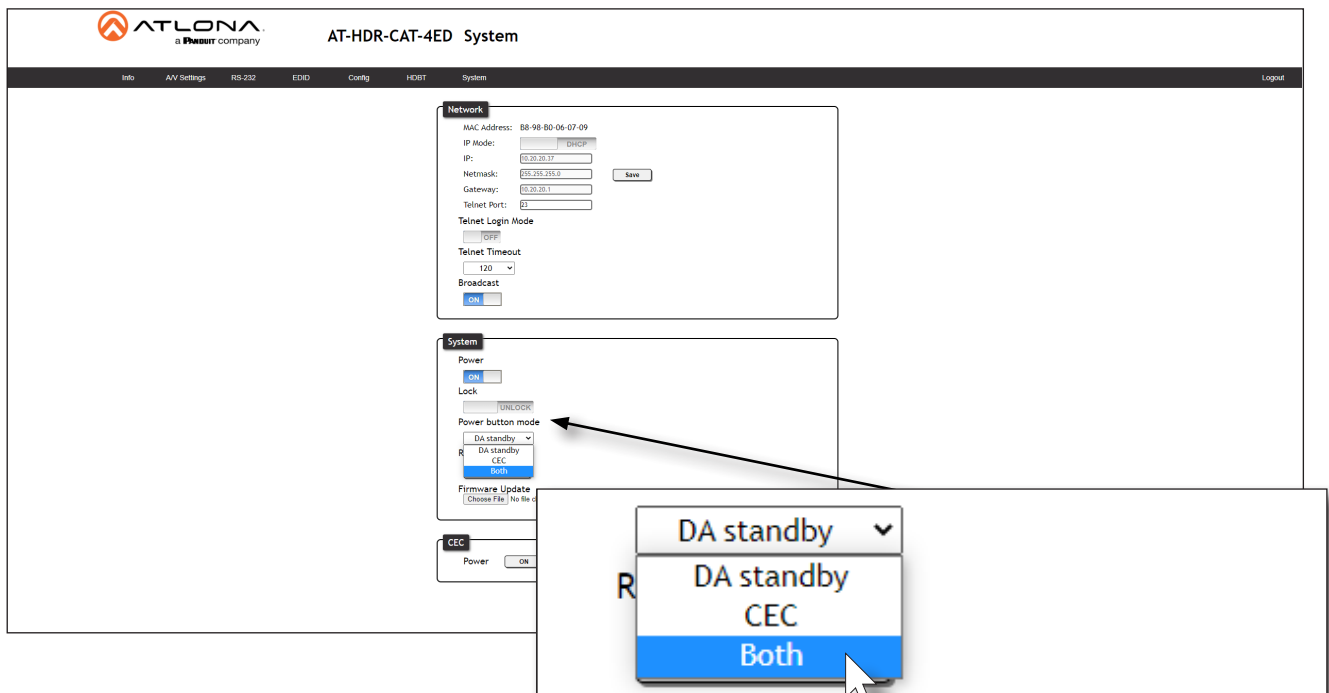

4. Test the CEC power-on and power-off commands for the display (sink) device by clicking the **ON** and **OFF** buttons, near the bottom of the page.

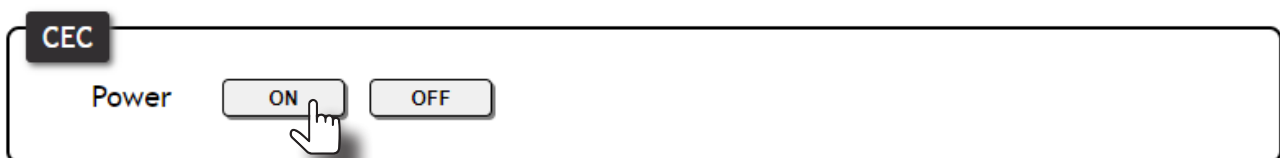

5. Press the **POWER** button on the front panel to power-on or power-off both the display and AT-HDR-CAT-4ED.

*Consumer Electronics Control (CEC): Atlona has confirmed proper CEC functionality with several current models of Samsung, Panasonic, and Sony displays. However, it is not guaranteed that CEC will work with all displays. Many manufacturers do not support the CEC "off" command, and older displays use proprietary commands. Atlona only supports displays that use the CEC command structure defined in HDMI 1.2a. It is recommended that dealers request an evaluation product from Atlona, before designing a system using the CEC protocol. If this is not possible, then other control methods will need to be considered, in order to control displays using Atlona products.


Setting the Host Name

By default, the AT-HDR-CAT-4ED is assigned a hostname, which is constructed as follows:

CAT-4ED-[last six digits of MAC address]

For example, a default hostname might look like this: CAT-4ED-060709. This value can be changed to easily identify the AT-HDR-CAT-4ED within the Velocity™ with Integrated AMS or a network. If using a custom hostname, it must meet the hostname standards, defined here: <https://tools.ietf.org/html/rfc1123>

1. Launch a web browser and log in to the web server. Refer to [Logging in to the Web Server \(page 16\)](#).
2. Click **System** in the menu bar.
3. Click the **Hostname** field and enter the desired name.
4. Click **Save** to commit changes.

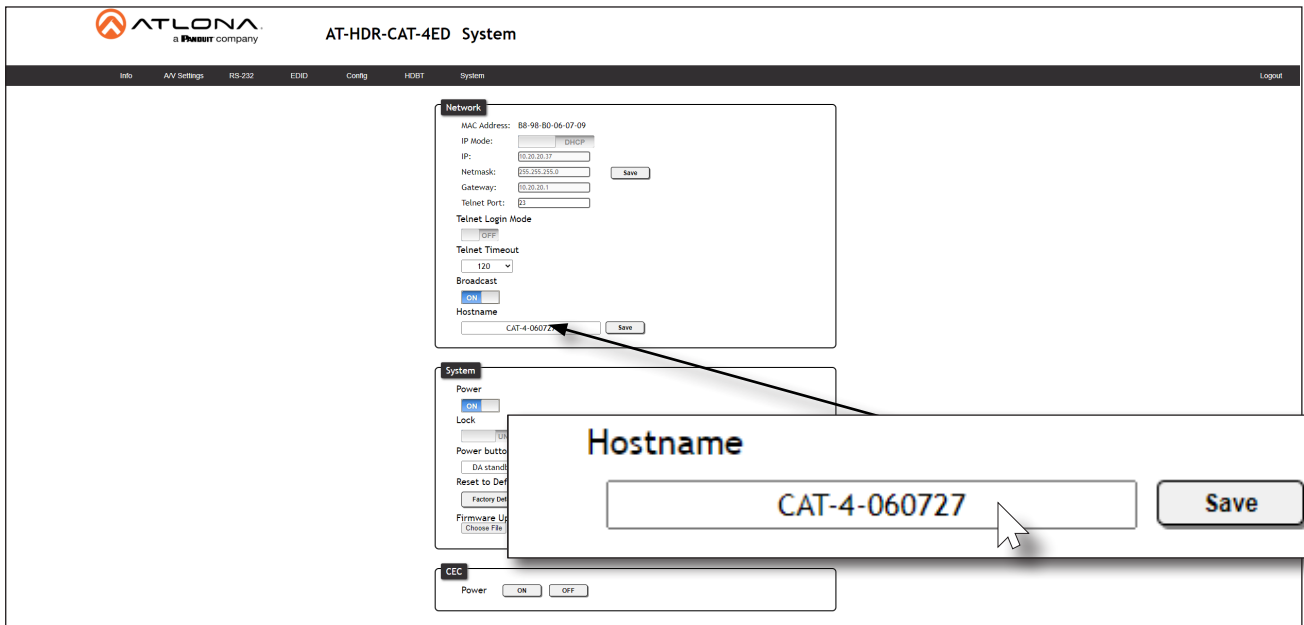


Resetting to Factory-Default Settings

The following procedure will reset the AT-HDR-CAT-4ED to factory-default settings. The network IP mode will be set to DHCP mode.

Using the Web Server

1. Launch a web browser and log in to the web server. Refer to [Logging in to the Web Server \(page 16\)](#).
2. Click **System** in the menu bar.
3. Click the **Factory Default** button.

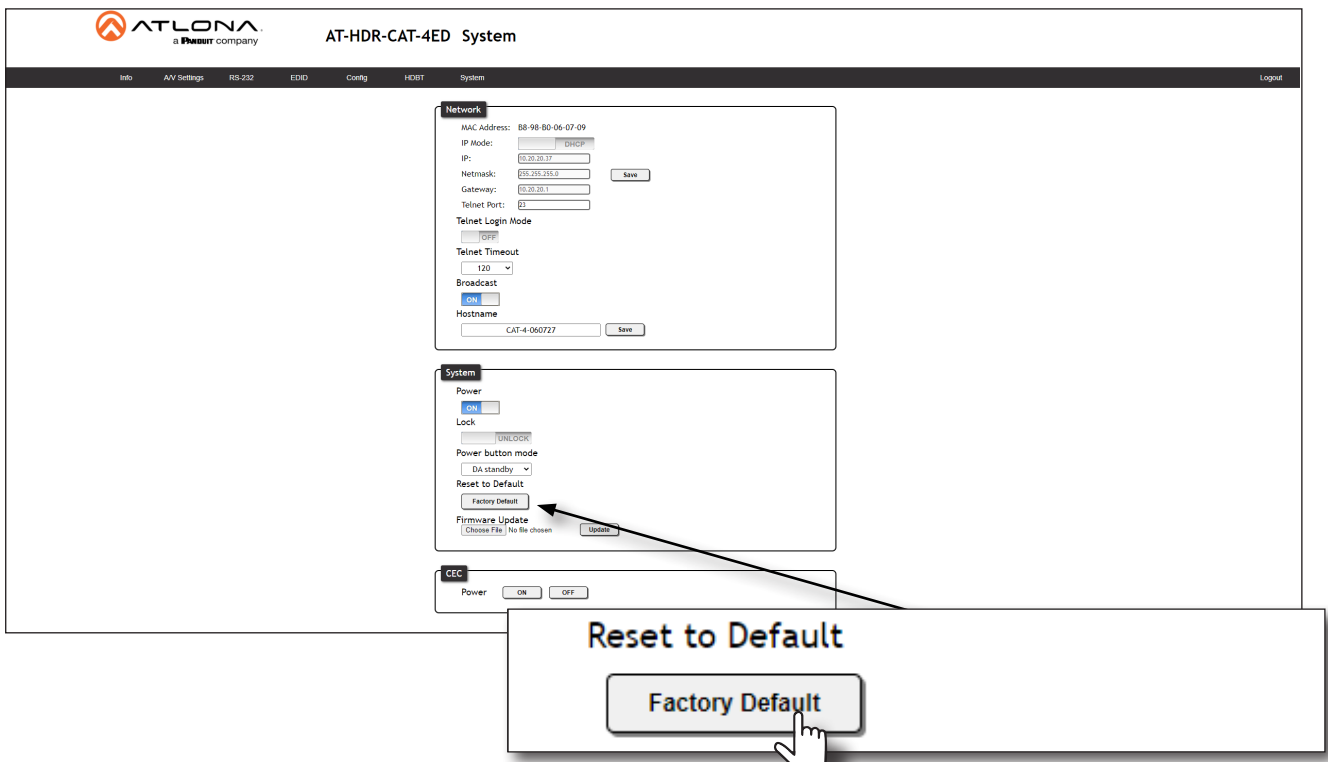


4. The following message will be displayed at the top of the screen. Click **OK** to continue with the factory-default reset procedure. Click **Cancel** to abort the process.



5. Once the factory-default process is complete, the web server **Login** screen will be displayed.
6. The reset process is complete.

Using the Front Panel

1. Press and hold both the **POWER** and **EDID** buttons for 15 seconds.
2. Release both **POWER** and **EDID** buttons once the front panel LED indicators turn on. After two seconds, the front panel LED indicators will turn off.

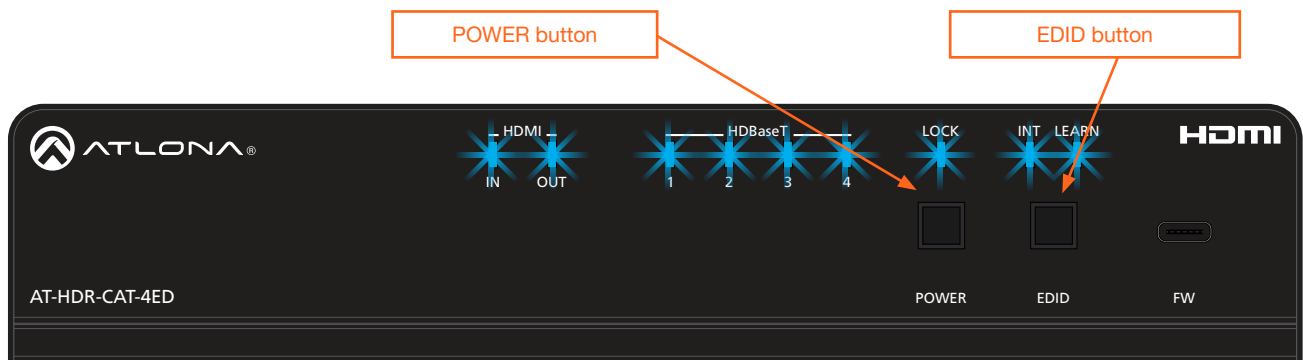

Configuration and Management Interfaces


Web Server

The AT-HDR-CAT-4ED includes a built-in web server. Atlona recommends that the web server be used to set up the AT-HDR-CAT-4ED, as it provides intuitive management of all features. Refer to [Logging in to the Web Server \(page 16\)](#) for more information.

The AT-HDR-CAT-4ED is shipped with DHCP enabled. Once connected to a network, the DHCP server will automatically assign an IP address to the unit. Use an IP scanner to determine the IP address of the AT-HDR-CAT-4ED. If a DHCP server cannot be located within 15 seconds, the AT-HDR-CAT-4ED will be placed in [Auto IP \(APIPA\) Mode \(page 14\)](#). If a static IP address is desired, refer to [IP Configuration \(page 12\)](#).

Register page

This page is displayed when the AT-HDR-CAT-4ED web server is launched for the first time.

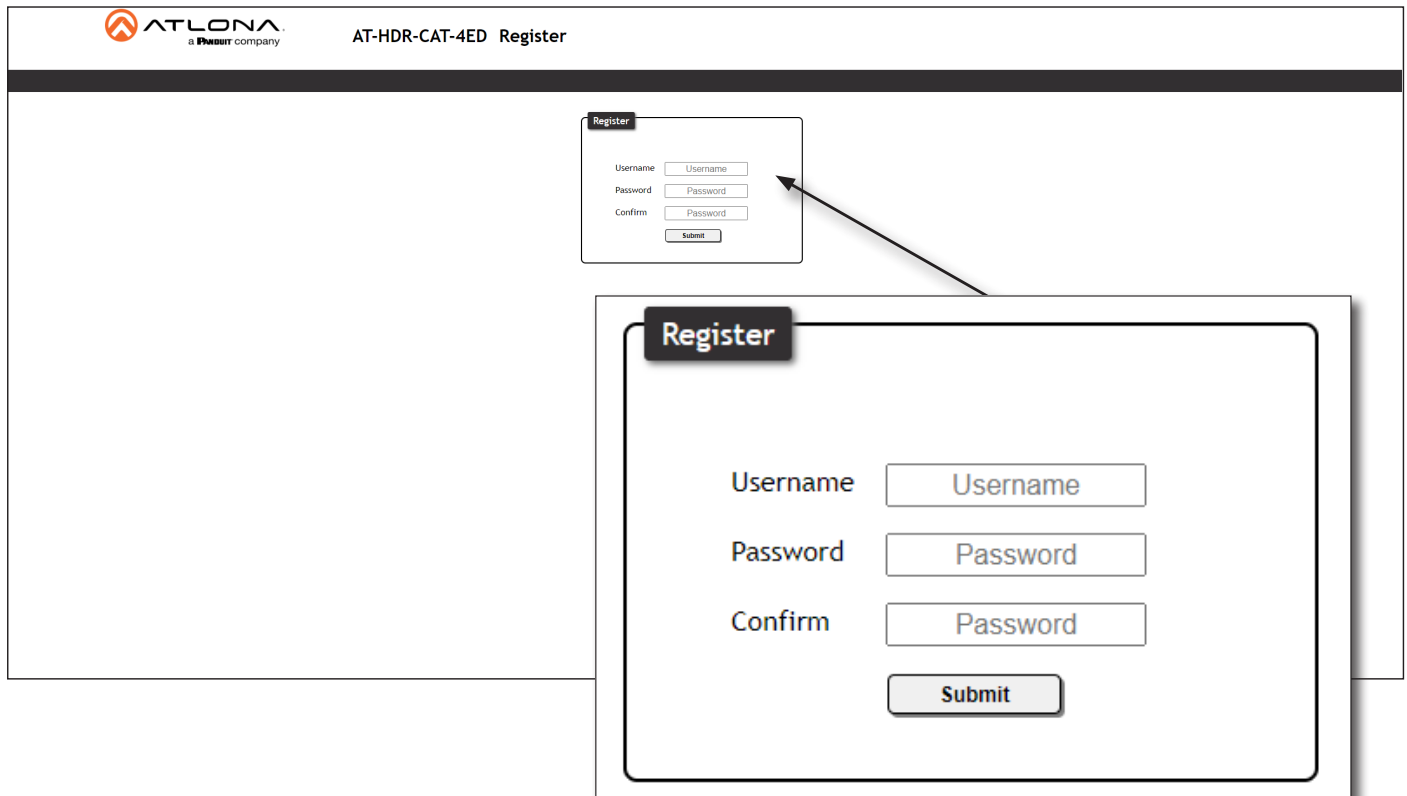

The screenshot shows the AT-HDR-CAT-4ED Register page. At the top left is the ATLONA logo (a stylized 'A' in a circle) and the text 'ATLONA a PANOUT company'. To the right of the logo is the page title 'AT-HDR-CAT-4ED Register'. Below the header is a registration form. The form has a title 'Register' in a dark box. It contains three input fields: 'Username' with the placeholder text 'Username', 'Password' with the placeholder text 'Password', and 'Confirm' with the placeholder text 'Password'. Below these fields is a 'Submit' button. A callout box on the right side of the form provides a larger, clearer view of the registration form, showing the labels 'Username', 'Password', and 'Confirm' next to their respective input fields, and the 'Submit' button at the bottom.

Username

Enter the desired username in this field.

Password

Enter the desired password in this field.

Confirm

Re-enter the desired password in this field.


Submit

Click this button to register the username and password with the AT-HDR-CAT-4ED.

Configuration and Management Interfaces

Login page

This page is displayed when the IP address of the AT-HDR-CAT-4ED is entered in the address bar of a web browser.

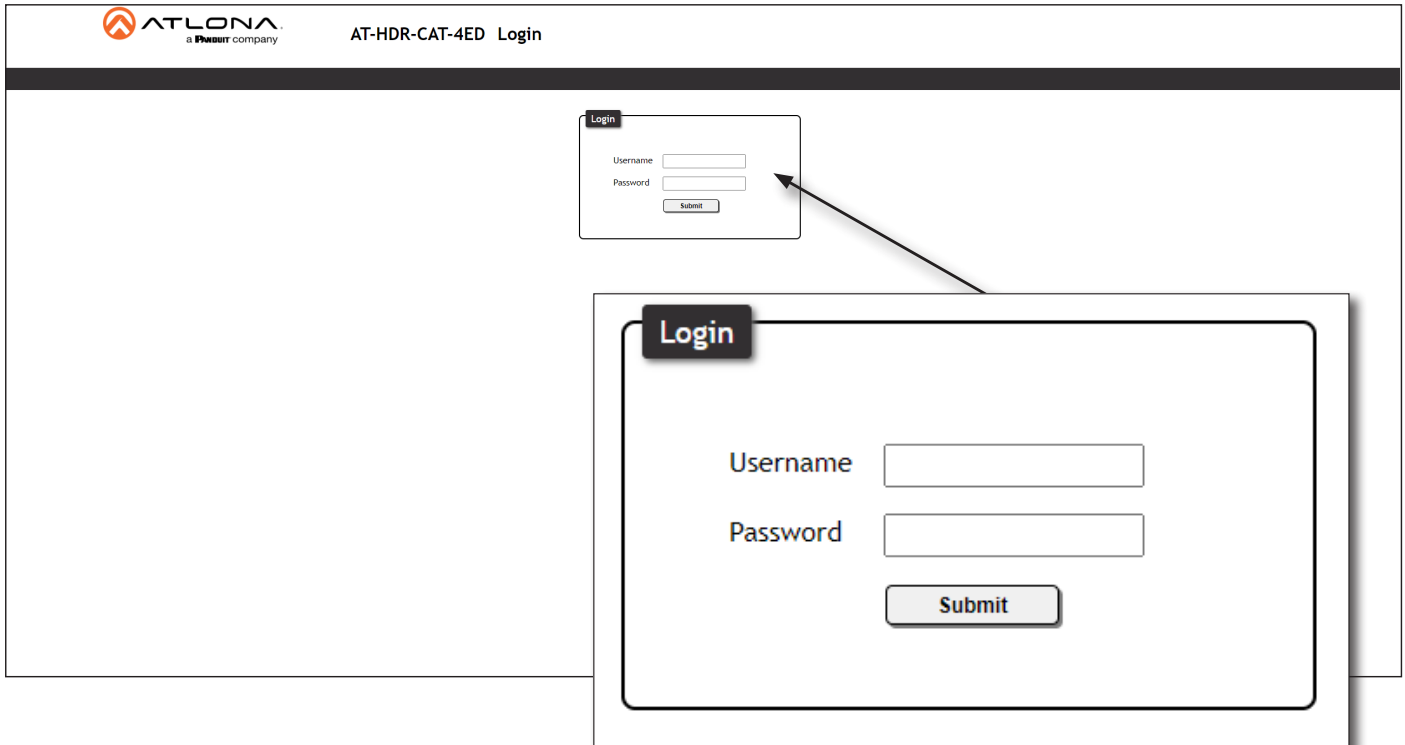

Username

Enter the username in this field.

Password


Enter the password in this field.

Submit

Click this button to log in.

Configuration and Management Interfaces

Info page

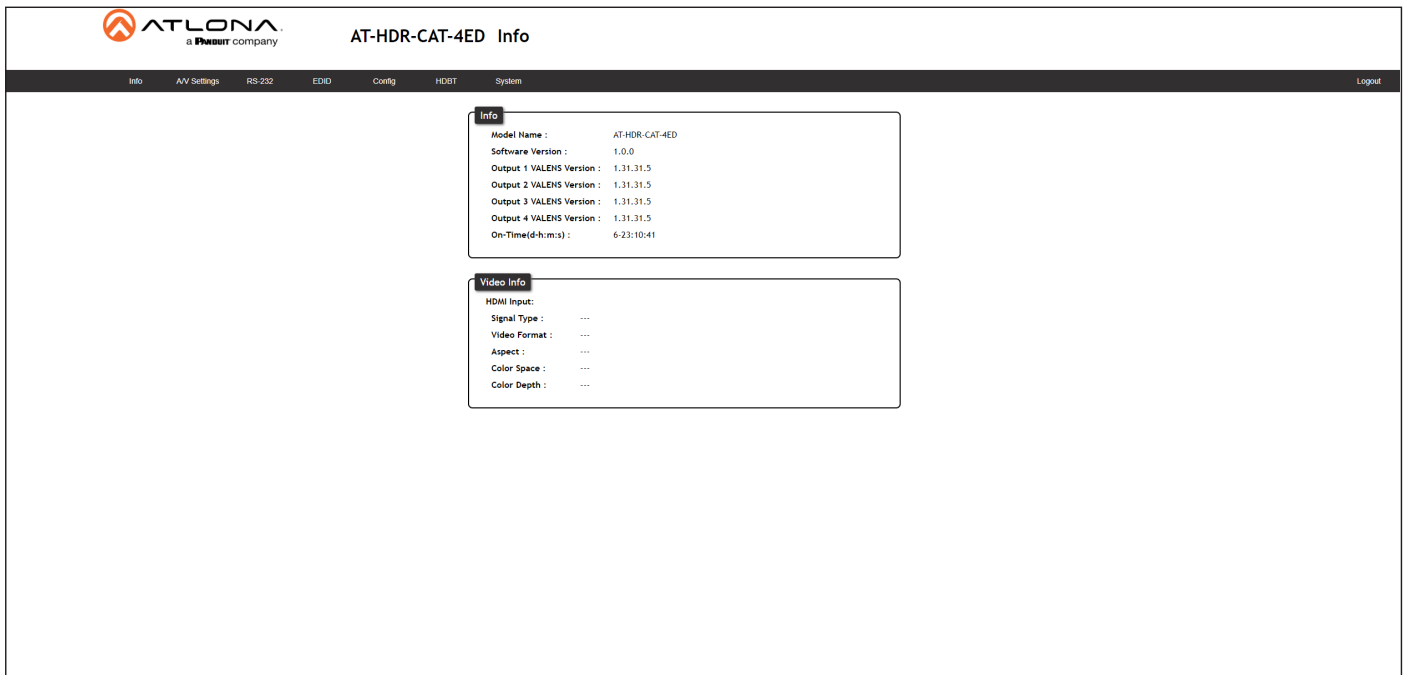

The screenshot shows the 'Info' page for the AT-HDR-CAT-4ED device. The page has a navigation bar with links for 'Info', 'AV Settings', 'RS-232', 'EDID', 'Config', 'HDBT', and 'System'. The main content area is divided into two sections: 'Info' and 'Video Info'.

Info Section:

- Model Name : AT-HDR-CAT-4ED
- Software Version : 1.0.0
- Output 1 VALENS Version : 1.31.31.5
- Output 2 VALENS Version : 1.31.31.5
- Output 3 VALENS Version : 1.31.31.5
- Output 4 VALENS Version : 1.31.31.5
- On-Time(d-h:m:s) : 6:23:10:41

Video Info Section:

- HDMI Input: ...
- Signal Type : ...
- Video Format : ...
- Aspect : ...
- Color Space : ...
- Color Depth : ...

Info

Model Name

The model SKU of this product.

Software Version

The version of firmware that the AT-HDR-CAT-4ED is running. Always make sure to check the AT-HDR-CAT-4ED product page, on the Atlona web site, for the latest version of firmware.

Output VALENS Version

The version of firmware on the HDBaseT chip for **HDBaseT OUT 1 - HDBaseT OUT 4**.

On-Time (d-h:m:s)

Displays the amount of time elapsed since the unit was powered.

Video Info

Displays signal information on the HDMI input.

Signal Type

The type of input signal.

Video Format

The input resolution of the source device.

Aspect

Aspect ratio of the input signal.

Color Space


Displays the color space and chroma sub-sampling of the input signal.

Color Depth

The color depth of the input signal.

Configuration and Management Interfaces

A/V Settings page

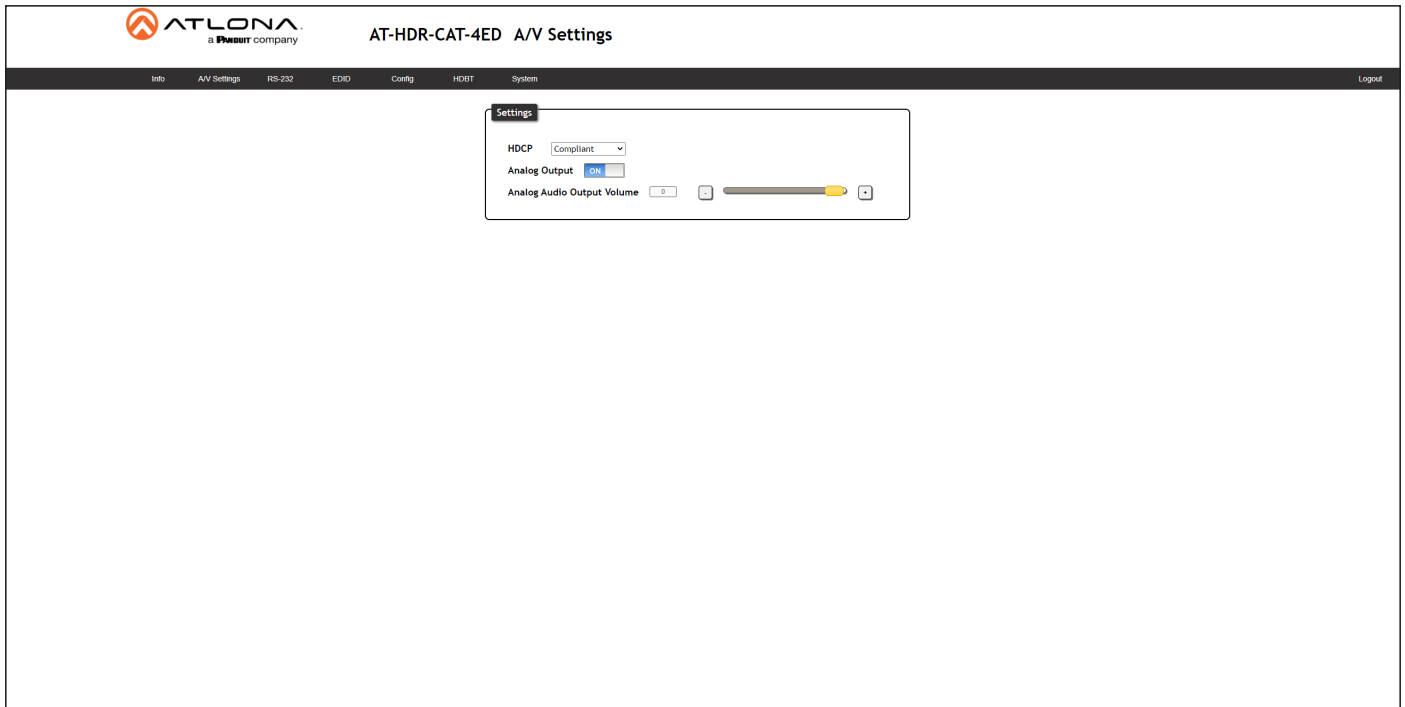

Settings

HDCP

Click this drop-down list to select the HDCP reporting mode.

Setting	Description
Compliant	Allows the source device to send HDCP content to an HDCP-compliant display. This is the default setting.
Non-compliant	Will attempt to force the source device to ignore detection of HDCP-compliant displays, allowing non-HDCP content to be transmitted from the source (if possible). Note that some source devices, such as PlayStation™ console systems and Mac® computers always send HDCP content. Selecting the Non-compliant option <i>will not</i> decrypt or circumvent HDCP-protected content.

Analog Output

Click this toggle switch enable or disable audio output on the **AUDIO OUT** port.


Setting	Description
ON	Audio is de-embedded and sent to the AUDIO OUT port.
OFF	Audio is disabled on the AUDIO OUT port.

Analog Audio Output Volume

Click and drag this slider to adjust the audio volume on the **AUDIO OUT** port.

Configuration and Management Interfaces

RS-232 page

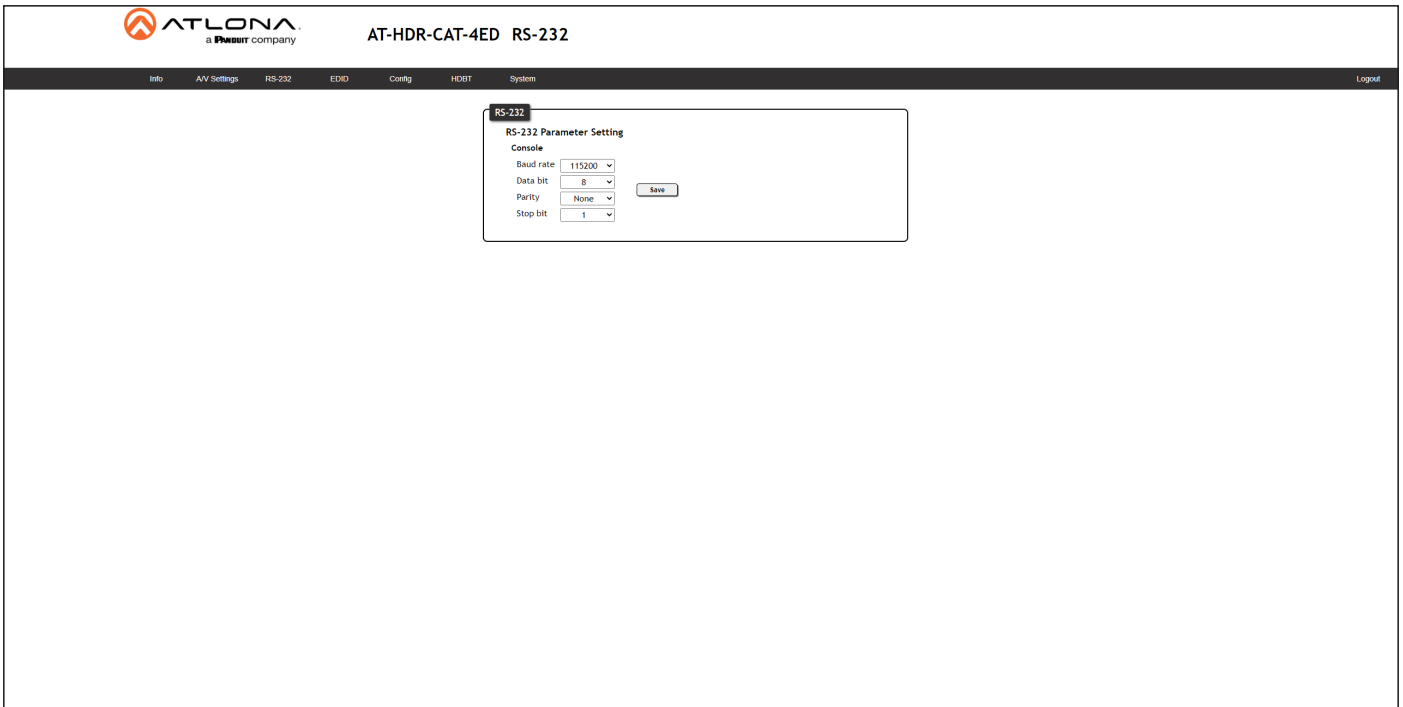

RS-232

RS-232 Parameter Setting

Click each of these drop-down boxes to select the desired baud rate, data bits, parity bit, and stop bit for the **MASTER RS-232 / IR** port.

Setting	Description
Baud rate	Sets the baud rate. The following options are available: 2400, 9600, 19200, 38400, 56000, 57600, 115200.
Data bit	Sets the number of data bits used to represent each character of data. The following options are available: 7 or 8.
Parity	Sets the parity bit, which can be included with each character to detect errors during the transmission of data. The following options are available: None, Odd, or Even.
Stop bit	Sets the stop bit. Stop bits are sent at the end of each character, allowing the client to detect the end of a character stream. The following options are available: 1 or 2.

Configuration and Management Interfaces

EDID page



EDID

EDID lock

Click this toggle to switch the EDID lock mode. When set to the **LOCK** position, the **LOCK** LED indicator on the front panel will glow solid blue. Note that in this mode, all front-panel buttons are locked.

EDID mode

Click this drop-down list to select the desired EDID mode.

Setting	Description
INT	Internal mode. Uses the selected internal EDID.
LEARN	Learn mode. Allows the AT-HDR-CAT-4ED to read the downstream EDID. Once the EDID is learned, it will be used by the connected source device to determine what video and audio formats can be sent to the sink device. Refer to EDID Management (page 19) for more information.

INT EDID settings

Click this drop-down list to select the desired EDID.


EDID	Description
Connected Display	Uses the downstream EDID of the connected display
ATL 4K60 MCH	3840 x 2160 (UHD) with multichannel audio support
ATL 4K60 PCM MCH	3840 x 2160 (UHD) with PCM multichannel audio support
ATL 1080P MCH	1920 x 1080p with multichannel audio support
ATL 1080P 2CH	1920 x 1080p with two-channel audio support
ATL 1080P DD	1920 x 1080p with Dolby™ Digital audio support
ATL 1080P DVI	1920 x 1080p for DVI displays
ATL 720P DD	1280 x 720p with Dolby™ Digital audio support
ATL 720P 2CH	1280 x 720p with two-channel audio support

EDID copy

Click this button to copy the selected EDID to the **HDMI IN** port.

Configuration and Management Interfaces

Config page

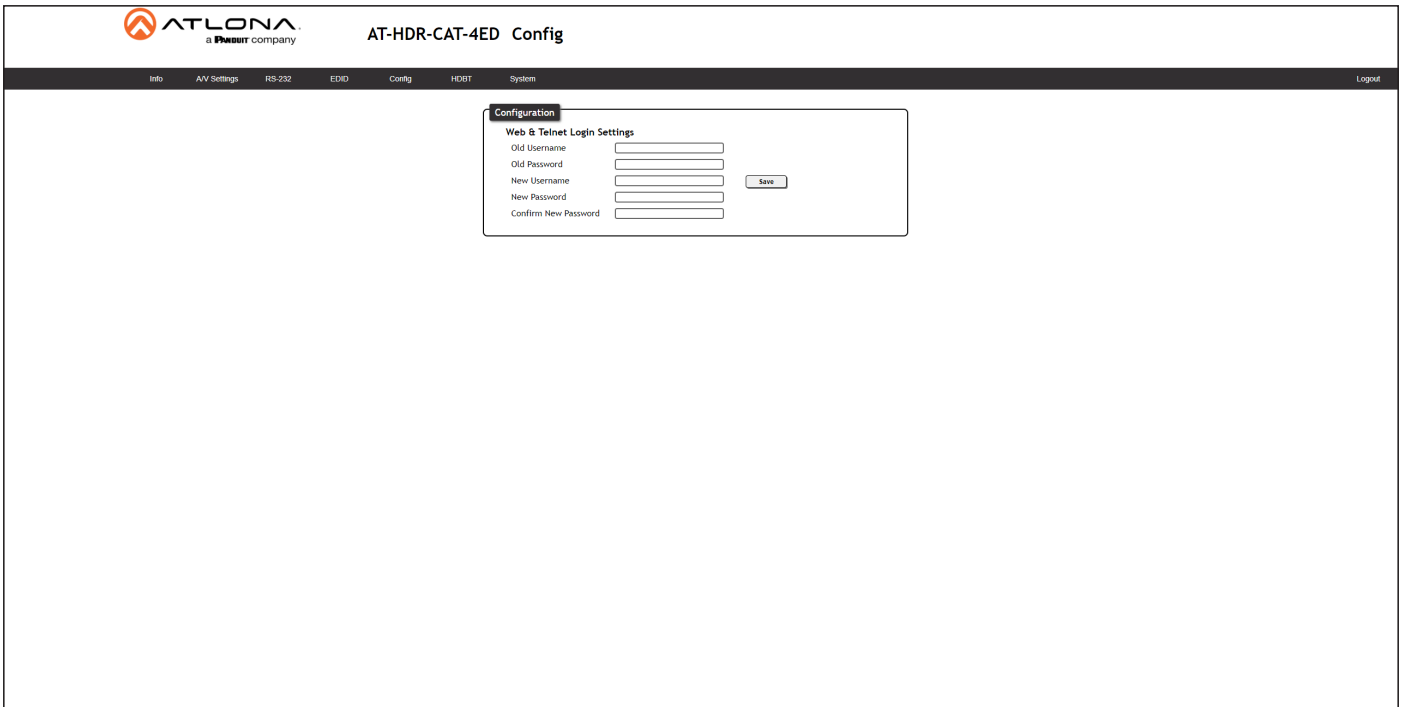

The screenshot shows the AT-LONA configuration interface for the AT-HDR-CAT-4ED device. The page title is 'AT-LONA a PANOUT company AT-HDR-CAT-4ED Config'. The navigation menu includes 'Info', 'AVV Settings', 'RS-232', 'EDID', 'Config', 'HDMI', and 'System'. The 'Config' tab is active. A 'Configuration' dialog box is displayed, titled 'Web & Telnet Login Settings'. It contains five input fields: 'Old Username', 'Old Password', 'New Username', 'New Password', and 'Confirm New Password'. A 'Save' button is located to the right of the 'New Username' field.

Configuration

Old Username

Enter the current username in this field.

Old Password

Enter the current password in this field.

New Username

Enter the new username in this field.

New Password

Enter the new password in this field.

Confirm New Password


Verify the new password by retying it in this field.

Save

Click this button to apply all changes.

Configuration and Management Interfaces

HDBT page

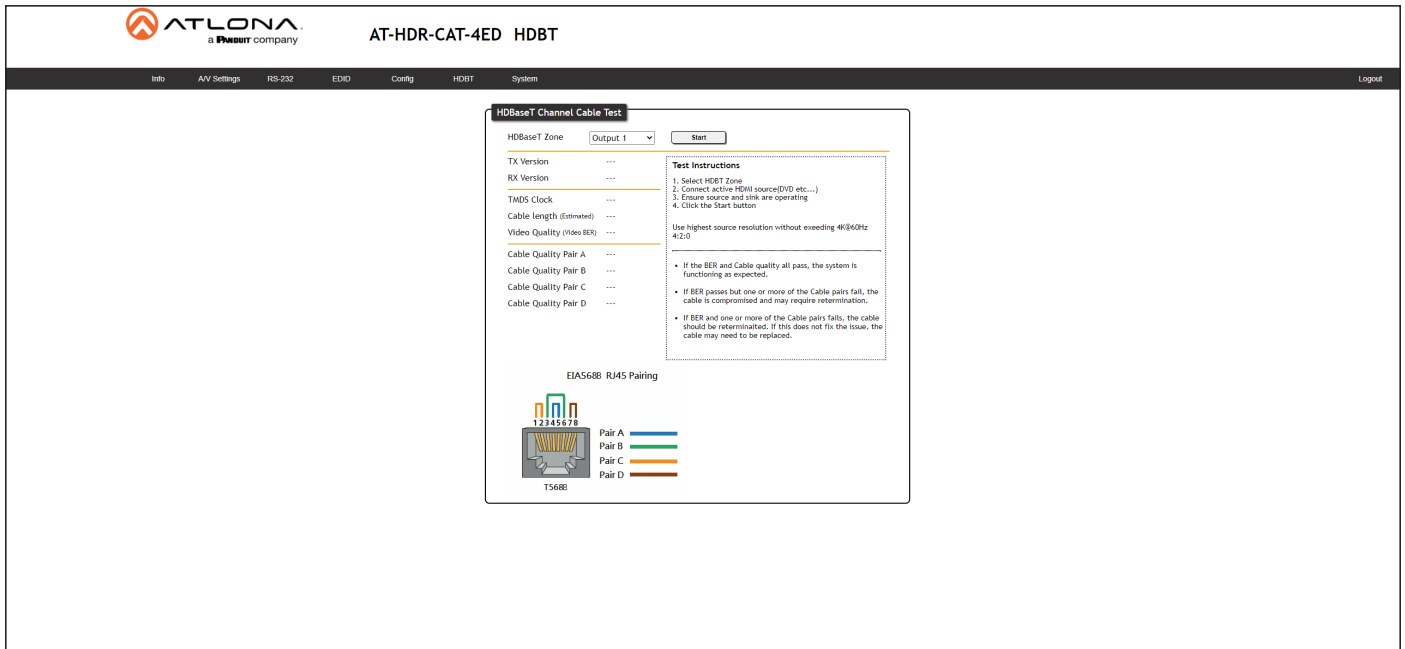

HDBaseT Channel Cable Test

HDBaseT Zone

Click this drop-down list to select the desired HDBaseT output to be tested.

Setting	Description	Setting	Description
Output 1	HDBaseT OUT 1	Output 3	HDBaseT OUT 3
Output 2	HDBaseT OUT 2	Output 3	HDBaseT OUT 4

Start

Click the **Start** button to begin the HDBaseT testing process. During testing, the button text will change to “Stop”. Click the **Stop** button to halt the HDBaseT testing process. HDBaseT testing can be performed at any time, while the unit is powered. Refer to the instructions on this web page for information on how to interpret the Bit Error Rate (BER) and cable test results.

TX Version

The version of the Valens chip on the transmitter.

RX Version

The version of the Valens chip on the receiver.

TMDS Clock

Displays the pixel clock speed. If no source is connected, then this field will display as “None”.

Cable length (Estimated)

This field indicates the approximate length of the Ethernet cable connected between the HDBaseT port on the AT-HDR-CAT-4ED and the receiver. If the cable length is less than 15 feet, then this value will be displayed as 0 (zero).

Video Quality (Video BER)


The Bit Error Rate (BER). This field displays either PASS or FAIL during a test.

Cable Quality Pair (A, B, C, D)

Each of these fields will display either PASS or FAIL during a test.

Configuration and Management Interfaces

System page

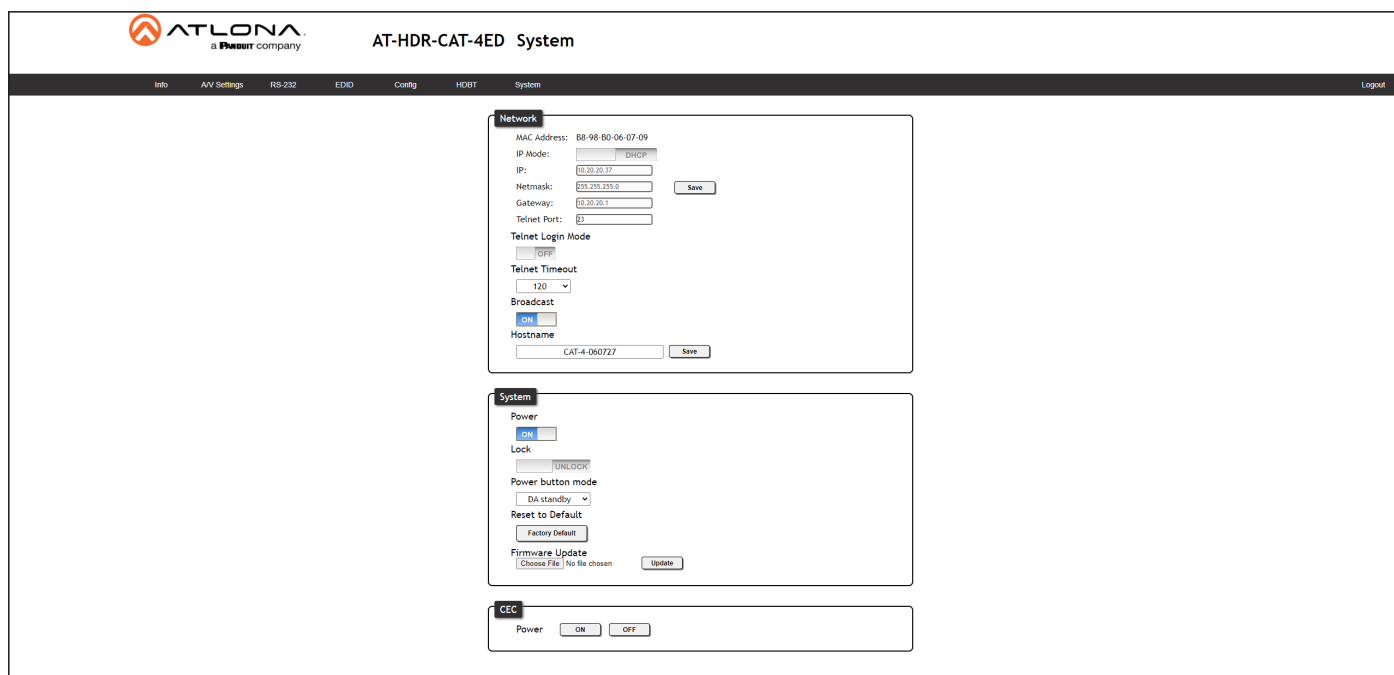

Network

MAC address

Displays the MAC address of the AT-HDR-CAT-4ED.

IP Mode

Click this toggle to set the IP mode of the AT-HDR-CAT-4ED.

Setting	Description
DHCP	Uses an available DHCP server to assign an IP address.
STATIC IP	Allows the IP address, subnet mask, and gateway IP address to be entered manually.

IP

Enter the IP address of the AT-HDR-CAT-4ED in this field. This field will only be available if **IP Mode** is set to **STATIC IP**. The default static IP address is 192.168.1.254.

Netmask

Enter the subnet mask in this field. This field will only be available if **IP Mode** is set to **STATIC IP**.

Gateway

Enter the gateway (router) address in this field. This field will only be available if **IP Mode** is set to **STATIC IP**.

Telnet Port

Enter the Telnet listening port in this field.

Telnet Login Mode

Click this toggle to set the login mode to either **ON** or **OFF**. If this feature is set to **ON**, then use the same login credentials as the web server.

Setting	Description
ON	The AT-HDR-CAT-4ED will prompt for both the username and password at the start of a Telnet session.
OFF	No username and password is required for Telnet sessions.

Configuration and Management Interfaces

Telnet Timeout

Click this drop-down list to select the timeout interval, in seconds, before the Telnet connection is automatically closed after no activity. Range: 1 to 3600 (seconds).

Broadcast

This option determines whether or not systems changes are announced over TCP/IP connections to any listening devices.

Setting	Description
ON	System changes will be announced over TCP/IP connections to any device that has a TCP/IP connection to the AT-HDR-CAT-4ED. This is the default setting.
OFF	only the device that is sending the commands will receive feedback from the commands or any system changes. Read queries, such as the <code>IPCFG</code> and <code>Type</code> commands, are not announced and will only return information to the requester.

Hostname

Displays the hostname of the AT-OME-MS42, as it would appear on a network. To change the hostname, type the new hostname in this field and click the **Save** button. Refer to [Setting the Host Name \(page 35\)](#) for more information.

System

Power

Determines the power state of the AT-HDR-CAT-4ED.

Setting	Description
ON	Under normal operation conditions, this toggle is set to ON.
OFF	Places the AT-HDR-CAT-4ED in standby mode. The <code>PWOFF</code> and <code>PWON</code> commands can also be used to control the power state.

Lock

Click to lock or unlock the buttons on the front panel. Locking the front panel buttons is useful in preventing accidental button activation within rack environments.

Setting	Description
LOCK	Locks the front panel buttons.
UNLOCK	Unlocks the front panel button, allowing them to be functional.

Configuration and Management Interfaces

Power button mode

Click this drop-down list to select the desired function of the power button. Refer to [Power Button Modes \(page 31\)](#) for more information.

Setting	Description
DA standby	Pressing the POWER button will toggle the AT-HDR-CAT-4ED between standby mode and normal operating mode.
CEC*	When a sink device (display) is connected to the AT-HDR-CAT-4ED, pressing the POWER button will toggle the power state of the display using the CEC protocol. <i>The power state of the AT-HDR-CAT-4ED is unaffected.</i> Power-on and power-off commands are sent over both the HDBaseT OUT and HDMI OUT ports
Both	Pressing the POWER button will toggle the power state of <i>both</i> the AT-HDR-CAT-4ED and any sink devices that are connected to the AT-HDR-CAT-4ED, using the CEC protocol. Power-on and power-off commands are sent over both the HDBaseT OUT and HDMI OUT ports.

Reset to Default

Click the **Factory Default** button to set the AT-HDR-CAT-4ED to factory-default settings.

Firmware Update

Click the **Choose File** button to select the firmware file, when upgrading the firmware on the AT-HDR-CAT-4ED. Once the firmware file is selected, click the **Update** button. Refer to [Updating the Firmware \(page 49\)](#) for more information.

CEC

ON / OFF

Click these buttons to test CEC control between the AT-HDR-CAT-4ED and the connected sink device. Click the **ON** button to power-on the device and **OFF** to power-off the device. Refer to [Power Button Modes \(page 31\)](#) for more information.

Button	Description
ON	Sends the CEC command to power-on the device.
OFF	Sends the CEC command to power-off the device.

**Consumer Electronics Control (CEC): Atlona has confirmed proper CEC functionality with several current models of Samsung, Panasonic, and Sony displays. However, it is not guaranteed that CEC will work with all displays. Many manufacturers do not support the CEC "off" command, and older displays use proprietary commands. Atlona only supports displays that use the CEC command structure defined in HDMI 1.2a. It is recommended that dealers request an evaluation product from Atlona, before designing a system using the CEC protocol. If this is not possible, then other control methods will need to be considered, in order to control displays using Atlona products.*

Appendix


Updating the Firmware

Updating the firmware can be completed using either the USB interface or the web server. Atlona recommends using the web server for updating the MCU firmware. However, if a network connection is not available, the AT-HDR-CAT-4ED firmware can be updated using a USB-A to USB-C cable.


Using the Web Server

Requirements:

- AT-HDR-CAT-4ED
 - Firmware file
 - Computer
1. Connect an Ethernet cable from the computer, containing the firmware, to the same network where the AT-HDR-CAT-4ED is connected.
 2. Log in to the web server and go to the [System](#) page (page 46).

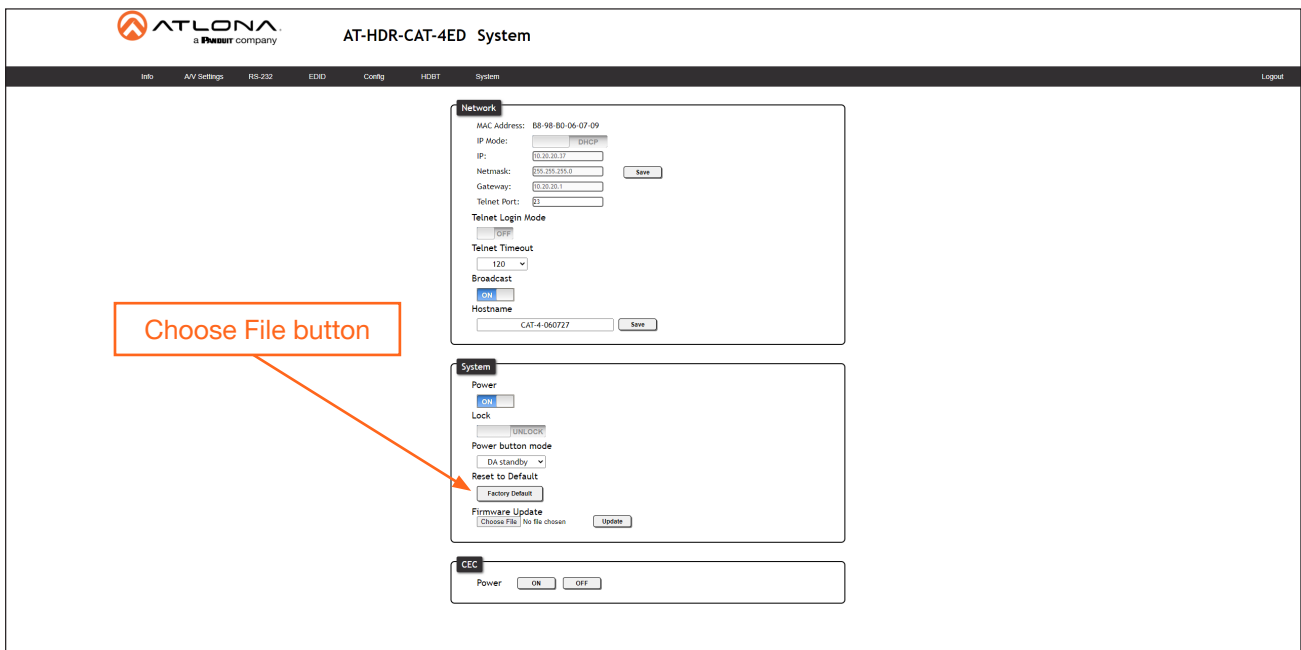

3. Click the **Choose File** button, under **Firmware Update**.
4. Browse to the location of the firmware file, select it, and click the **Open** button.
5. Click the **Update** button to begin the update process. The following message box will be displayed.

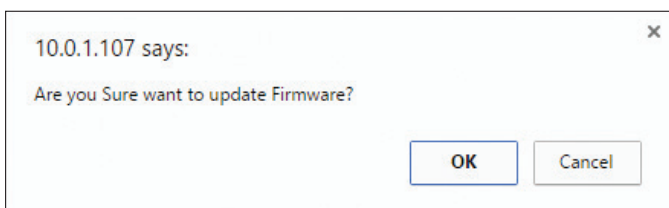

6. Click the **OK** button to begin the firmware update process. Click the **Cancel** button to cancel the process.
7. After the firmware update process is complete, the **Login** screen will be displayed, indicating that the update process is complete.

Using USB

Required items:

- AT-HDR-CAT-4ED
 - Computer containing the firmware file.
 - USB-A to USB-C cable
1. Disconnect power from the AT-HDR-CAT-4ED.
 2. Press and hold the **EDID** button while connecting power to the AT-HDR-CAT-4ED.
 3. Release the **EDID** button. The **POWER** button will glow solid red, indicating that the AT-HDR-CAT-4ED is in update mode.
 4. Connect the USB-A to USB-C cable between the PC and the firmware port on the AT-HDR-CAT-4ED.
 5. A virtual USB drive will be displayed in a pop-up window.
 7. Delete all files from the virtual drive, if any are present.
 8. Drag-and-drop the firmware file to the drive. During the firmware update procedure, the **POWER** button will flash.
 9. After the file has been copied, disconnect the USB cable from both the computer and the AT-HDR-CAT-4ED.
 10. The firmware update process is complete.

Default Settings

The following tables list the factory-default settings for the AT-HDR-CAT-4ED.

Feature	Setting	Value
A/V Settings	HDCP	Compliant
	Analog Output	ON
	Analog Output Volume	0
RS-232	Baud rate	115200
	Data bit	8
	Parity	None
	Stop bit	1
EDID	EDID lock	UNLOCK
	EDID mode	INT
	INT EDID settings	Connected Display
System	IP Mode	DHCP
	Static IP Address (default)	192.168.1.254
	Netmask	255.255.0.0
	Gateway	192.168.1.1
	Telnet Port	23
	Telnet Login Mode	OFF
	Telnet Timeout	120
	Broadcast	ON
	Power	---
	Lock	UNLOCK
Power button mode	DA standby	

Specifications

Video	
Signal	Input - HDMI Output - HDMI / HDBaseT
Copy Protection	HDCP 2.2
Pixel Clock	600 MHz
UHD/HD/SD	4096x2160 (DCI) @ 24/25/30/50/60 Hz 720x576p @ 50 Hz 3840x2160 (UHD) @ 24/25/30/50/60 Hz 720x576i @ 25/50 Hz 1920x1080p @ 720x480p @ 60 Hz 23.97/24/25/29.97/30/50/60 Hz 640x480p @ 60 Hz 1920x1080i @ 50/60 Hz 1280x720p @ 30/50/60 Hz
VESA	2560x1600 @ 60 Hz (RB) 1366x768 @ 60 Hz 2048x1536 @ 60 Hz 1360x768 @ 60 Hz 2048x1200 @ 60 Hz 1280x1024 @ 60 Hz 2048x1080 @ 60 Hz 1280x800 @ 60 Hz 1920x1200 @ 60 Hz (RB) 1280x768 @ 60 Hz 1920x1080 @ 60 Hz (RB) 1280x720 @ 60 Hz 1680x1050 @ 60 Hz 1024x768 @ 60 Hz 1600x1200 @ 60 Hz 800x600 @ 60 Hz 1600x900 @ 60 Hz 640x480i @ 29.97/30 Hz 1440x900 @ 60 Hz 1400x1050 @ 60 Hz
Color Space	YUV, RGB
Chroma Subsampling	4:4:4, 4:2:2, 4:2:0
Color Depth	8-bit, 10-bit, 12-bit
HDR	HDR10, Hybrid-Log Gamma (HLG), and Dolby® Vision™ @ 60 Hz ⁽¹⁾

Audio			
HDMI / HDBaseT Pass-Through Formats	PCM 2.0 LPCM 5.1 LPCM 7.1	Dolby® Digital Dolby Digital Plus™ Dolby TrueHD Dolby Atmos®	DTS® Digital Surround™ DTS-HD Master Audio™ DTS:X®
Bit Depth	Up to 24 bits		
Analog Audio			
Format	Stereo 2-Channel		
Balanced Output	+4 dBu nominal gain, +19 dB headroom		
Frequency Response	20 Hz to 20 kHz, ± 0.5 dB		
THD+N	< 0.006% at 20 Hz to 20 kHz		
SNR	> 105 dB at 1 kHz, zero clipping @ 0 dBFS, unweighted		
Sample Rate	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz, 176.4 kHz, 192 kHz		

Ethernet	
Port	1 x RJ45
Standards and Protocols	HTTP, HTTPS, Telnet, mDNS
Speeds	10/100 Mbps
Addressing	DHCP, Static – selectable through front panel, IP & RS-232 commands, and built-in web server

RS-232	
Port	5 x 5-pin captive screw
Use	Unit and external device control and configuration
Baud Rates	2400, 4800, 9600, 19200, 38400, 57600, 115200
Data Flow	Bidirectional

IR	
Port	5 x 5-pin captive screw
Use	Pass-through from control system to sink device Pass-through from viewing location to source
Frequency Range	30 kHz to 60 kHz

CEC	
Ports	1 x HDMI OUT, Type A, 19-pin female; 4 x RJ45 (HDBaseT OUT)
Triggering	Through IP, RS-232, and built-in web server

Resolution / Distance	4K/UHD - Feet / Meters		1080p - Feet / Meters	
HDMI IN/OUT	15	5	30	10
CAT5e/6	230	70	330	100
CAT6a/7	330	100	330	100

Buttons and Indicators	
Buttons: POWER, EDID	2 x momentary, tact-type
Indicators: HDMI IN/OUT, HDBaseT (1 - 4), LOCK, INT, LEARN	9 x LED, blue

Connectors	
HDMI IN	1 x Type A, 19-pin female
HDMI OUT	1 x Type A, 19-pin female
HDBaseT OUT	4 x RJ45
LAN	1 x RJ45
AUDIO OUT	1 x 5-pin captive screw
RS-232 / IR	5 x 5-pin captive screw
FW	1 x USB-C
DC 48V	1 x 2-pin captive screw

Environmental	Fahrenheit	Celsius
Operating Temperature	+32 to +122	0 to +50
Storage Temperature	-4 to +140	-20 to +60
Operating Humidity (RH)	20% to 90%, non-condensing	

Power	
Consumption (w/ 4 PoE)	71.5 W
Idle Consumption (no PoE)	11.5 W
BTU/h	39.2
External Power Supply	100 - 240 V AC, 50/60 Hz Output: 48 V / 2.08 A DC

Dimensions (H x W x D)		
	Inches	Millimeters
Unit	1.73 x 8.64 x 10	44 x 219.5 x 254
Power Supply (AT-PS-48208-C)	1.3 x 2.24 x 5.35	33 x 57 x 136
Weight		
	Pounds	Kilograms
Device	3.75	1.7
Certification		
Device	CE, RoHS, FCC	
Power Supply	CE, FCC, UL, CUL, TUV-GS, CB, PSE, CCC	
Compliance		
NDA-899	Yes	

Footnotes

(1) Dolby® Vision™ @ 60 Hz is over HDMI in/out only.

