

# ROBE FOG 1600 FT



QR code for user manual



USER MANUAL

Version: 1.2

**FT series**



# ROBE FOG 1600 FT

---

## Table of contents

1. Introduction	4
2. Safety information	4
3. Unpacking and inspection	5
4. Setup	5
5. Operation	5
5.1 Menu settings with the button MENU	5
5.2 Continuous operation	6
6. DMX connector pin assignment	7
7. ROBE FOG 1600 FT external view	8
8. Performance note	8
9. Cleaning and storage	8
10. Technical specifications	9
11. Approval	9
12. Warranty	9

## 1. Introduction

Thank you for choosing the ROBE FOG 1600 FT. You now own a rugged and powerful state-of-the-art machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to the reliable and satisfactory performance of your ROBE FOG 1600 FT machine for years to come.

Please follow these operation, safety and maintenance instructions to ensure a long and safe life for your haze machine.

## 2. Safety information

Risk of electric shock. Disconnect the appliance from the electric supply before refilling liquid, cleaning or performing maintenance on the machine.

### Danger of Electric Shock

Keep this device dry.

Indoor use only. Not designed for outdoor use.

For all models, use 3-prong grounded electrical outlet only. Prior to use, take care to determine that the unit is installed at the rated voltage.

Always unplug your Robe Fog Machine before filling its tank. Always keep fog machine in upright position.

Turn off or unplug the machine when not in use.

This machine is not water-proof. If moisture, water, or fog fluid gets inside the housing, immediately unplug the unit and contact a service technician or your Robe dealer before using it again.

No user serviceable parts inside. Refer to your Robe dealer or other qualified service personnel.

### Danger of Burns

This device is for adult use only and must be installed out of the reach of children. Never leave the unit running unattended. Never aim the output nozzle directly at people.

Fog machine output is very hot. Avoid coming within 50 cm of the output nozzle during operation.

Locate the fog machine in a well-ventilated area. Never cover the unit's vents. In order to guarantee adequate ventilation, allow a free air space of at least

20 cm around the sides and top of the unit. Never aim the output nozzle at open flames.

If the supply cord is damaged, it must be replaced by manufacturer or its service agent or similarly qualified personnel in order to avoid a hazard. The output nozzle becomes very hot during operation (200°C).

Keep flammable materials at least 50 cm away from the nozzle.

Always allow your Robe Fog Machine to cool down before attempting to clean or service it.

### Danger of Explosion

Never add flammable liquids of any kind (such as oil, gas, perfume) to the fog liquid.

Use only high-quality, water-based fog liquid that your dealer recommends. Other fog liquids may cause clogging or "spitting".

Always make sure there is sufficient liquid in the tank. Operating this unit without liquid might cause damage to the pump as well as over-heating of the heater.

If your Robe Fog Machine fails to work properly, discontinue use immediately. Drain all fog liquid from the tank, pack the unit securely (preferably in the original packing material), and return it to your Robel dealer for service.

Always drain tank before mailing or transporting this unit.

Never drink fog liquid. If it is ingested, call a doctor immediately. If fog liquid comes in contact with skin or eyes, rinse thoroughly with water.

Note: Pay attention to all warning labels and instructions printed on the exterior of your Robe Fog Machine.

### 3. Unpacking and inspection

Open the shipping carton and verify that all equipment necessary to operate the system has arrived intact. The shipping carton should contain the following items:

1. Robe Fog 1600 FT
2. Power cord
3. User Manual

If any equipment is missing, contact your Robe dealer immediately.

Before beginning your initial setup on Robe Fog 1600 FT machine, make sure that there is no evident damage caused by transportation. In the event that the unit's housing or cable is damaged, do not plug it in and do not attempt to use it until after contacting your Robe dealer for assistance

### 4. Setup

Remove all packing materials from shipping box. Check that all foam and plastic padding is removed, especially in the nozzle area.

Place fog machine on a flat surface and remove fog liquid tank cap. Place the liquid tube into a properly filled liquid tank.

Fill with high-quality, water-based fog liquid recommended by Robe dealer. Any other types of liquid can damage the unit resulting in spitting and serious clogging problem. When filled, place cap back on liquid tank. Be careful not to exceed the maximum fluid level. DO NOT OVERFILL.

### 5. Operation

#### Control Panel

The built-in control panel on the rear of the machine features an LCD panel displaying all operation status of the fog machine. The control panel allows the user to customize fog machine functions by adjusting the fogging duration, interval, and volume as well as the DMX address, and the fluid sensor. There are 4 buttons on the control board. All current operating parameters are automatically stored in non-volatile memory, allowing the machine to be powered down without losing function settings.

After powering on, the display shortly indicates »Robe Fog 1600 FT«. At this time, users may press MENU button and hold for 2 seconds to switch the language for control interface from English to Chinese.

After displaying the software version, the display indicates »AC Voltage AC-XX0V X0Hz«. At this time, users may press MENU button and hold for 2 seconds to switch the power voltage between 100V, 110V, 120V, 220V, 230V and 240V.

Then the fog machine starts with the warm-up process and the display indicates »Warming Up«. While the unit is warming up, fog output will not be possible yet. Program the necessary menu settings with the control panel. Once the warm-up process is completed, fog output will be possible. The display indicates »Ready to Fog«. Additionally, a »P« for W-DMX, or an »S« for fluid sensor is indicated if these functions are activated.

#### 5.1 Menu settings with the button MENU

##### Setting time intervals for timer operation

Press the button MENU until the display indicates »Interval Set«. Use the buttons UP and DOWN to adjust the intervals between the individual fog outputs in timer mode within the range of 5 and 200 seconds.

##### Setting the output duration for timer operation

Press the button MENU until the display indicates »Duration Set«. Use the buttons UP and DOWN to adjust the duration of the fog outputs in timer mode within the range of 1 and 200 seconds.

##### Setting the fog output volume for timer operation

Press the button MENU until the display indicates »Timer Output«. Use the buttons UP and DOWN to adjust

the fog output volume in timer mode within the range of 1 % and 100 %.

#### Setting the fog output volume for continuous operation

Press the button MENU until the display indicates »Volume Output«. Use the buttons UP and DOWN to adjust the fog output volume in continuous mode within the range of 1 % and 100 %.

To set the unit to continuous fog output in continuous mode, select »NON STOPBURST« below a value of 1 % or above a value of 100 %.

#### NOTE:

When setting a fog output volume higher than 30 % for continuous operation, the fog machine occasionally needs to stop the fog output to reheat. When »NONSTOPBURST« is selected, the fog machine adjusts the fog output volume and heater temperature automatically and does not need to stop the fog output to reheat.

#### Setting the DMX512 address

Press the MENU until the display indicates »DMX512 Address: 001«. Use the buttons UP and DOWN to set the machine to the same address as on your DMX controller. Please refer to chapter DMX512 settings for more information on DMX operation.

#### Switching the wireless function on and off

Press the button MENU until the display indicates »Wireless ON«. Use the buttons UP and DOWN to deactivate the wireless function (indication »Wireless OFF«) and to reactivate it (indication »Wireless ON«).

#### Switching the fluid sensor on and off





Press the button MENU until the display indicates »Fluid Sensor Set ON«. Use the buttons UP and DOWN to deactivate the fluid sensor (indication »Fluid Sensor Set OFF«) and to reactivate it (indication »Fluid Sensor Set ON«).

#### Switching the W-DMX function on and off

Press the button MENU until the display indicates »W-DMX Power ON«. Use the buttons UP and DOWN to deactivate the W-DMX function (indication »W-DMX Power OFF«) and to reactivate it (indication »W-DMX Power ON«).

#### Note:

When W-DMX function is activated, the connection status will be shown on display by below symbols.

Symbol on the Liquid Crystal Display	Status of W-DMX connection
	Transmitter assigned, DMX signal received
	Transmitter assigned, No DMX signal
	Transmitter link lost or linking to transmitter
	Transmitter not assigned

#### Setting W-DMX 512 address

When W-DMX function is activated, press button MENU until the display indicates »W-DMX Address: 001«. Use the buttons UP and DOWN to set the machine to the same address as on your W-DMX console.

#### Resetting W-DMX connection

When W-DMX function is activated, press button MENU until the display indicates »W-DMX Reset OFF«. Use the buttons UP and DOWN to activate the resetting: delete previous W-DMX connection and relink. Once the deletion and relink are done, the display indicates »W-DMX Reset OFF« again.

#### Switching the run last setting function on and off

Press the button MENU until the display indicates »Run Last Setting ON«. Use the buttons UP and DOWN to deactivate the run last setting function (indication »Run Last Setting OFF«) and to reactivate it (indication »Run Last Setting ON«).

## 5.2 Continuous operation

Press the button VOLUME, to activate continuous fog output. The display indicates »Volume Output« followed by the value that was set in menu item »Volume Output« or »NONSTOPBURST« when continuous fog output was selected. To stop the fog output, press STOP button.

### NOTE:


When a fog output volume higher than 30 % was set for continuous operation, the fog machine occasionally needs to stop the fog output to reheat. When »NONSTOPBURST« was selected, the fog machine adjusts the fog output volume and heater temperature automatically and does not need to stop to reheat.

### Timer operation

In the timer mode, the fog machine will automatically emit fog. The time intervals, duration and fog volume depend on the corresponding menu settings. Press the button TIMER to activate the timer mode. The display indicates the set time interval. The unit counts down to 0 seconds and emits fog. To deactivate the timer mode, press STOP button.

## 6. DMX connector pin assignment

The machine provides 3 or 5 pin XLR connector for DMX connection. Diagram below indicate pin assignment information

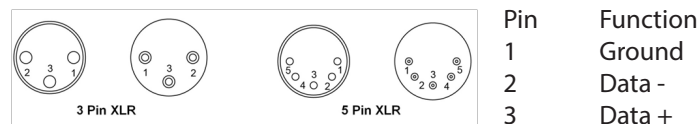

### DMX512 Settings

#### Channel A



0 - 5 = off (no output)

6 - 255 = output volume control (1 - 100 % output)

Both models are equipped with a DMX512 system. For connecting a DMX controller, 3-pin and 5-pin male-female XLR connections are provided at the back of each machine. The machines use one control channel for adjusting the output volume. The channel has a DMX value range of 0 to 255. After connecting a DMX controller, timer functions such as output duration and interval can be programmed using the DMX controller or the DMX control software. By using the DMX protocol, fog machines, lighting effects, and other special effects machines can be interconnected and easily controlled.

If channel A has a value from 0 to 5, the unit is off.

Between the values 6 to 255 the fog output volume is regulated. With 6 being the minimum output volume and 255 approaching the maximum output volume. The output volume rises as the DMX value is increased.

Note: If, for example, the machine is assigned to the DMX address 124, channel A corresponds to DMX address 124.



### Note

If you experience low output, pump noise or no output at all, unplug immediately. Check the fluid level, the external fuse, the connection to the remote control, and power from the wall. If all of the above appears to be O.K., plug the unit again. If fog does not come out after holding the remote button down for 30 seconds, check the hose attached to the tank to make sure there is fluid going through the hose. If you are unable to

determine the cause of the problem, do not simply continue pushing the remote button, as this may damage the unit. Return the machine to your Robe dealer.

## 7. ROBE FOG 1600 FT external view

- 01-Nozzle
- 02-Handle
- 03-Body
- 04-Tank & tank's cap
- 05-PUtube & filter
- 06-Tube adaptor
- 07-Safety ring
- 08-Control outlet socket (3 Pin XLR for DMX)
- 09-Control inlet socket (3 Pin XLR for DMX)
- 10-Control outlet socket (5 Pin XLR for DMX)
- 11-Control inlet socket (5 Pin XLR for DMX)
- 12-Rocker switch / Power
- 13-Circuit breaker
- 14-Power socket
- 16-Control panel
- 17-Foot
- 18-Power cord

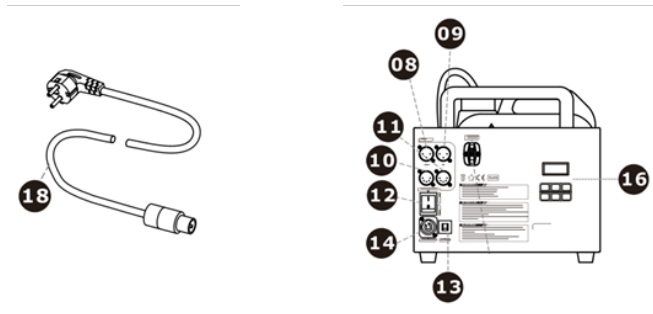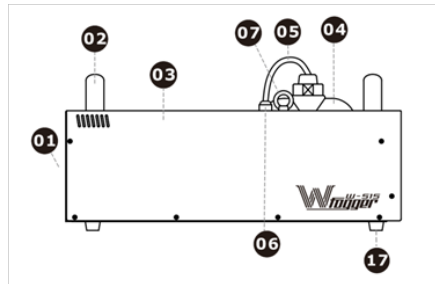

## 8. Performance note

All fog machines develop condensation around the output nozzle. Because this may result in some moisture accumulation on the surface below the output nozzle, consider this condensation when installing your unit.

All fog machines may sputter small amounts of fog occasionally during operation and for a minute or so after being turned off.

All fog machines have a recycling period after long bursts when the machine will shut itself down for a short period in order to heat up again. During this time no fog can be produced.

## 9. Cleaning and storage

Do not allow the fog liquid to become contaminated. Always replace the cap on the fog liquid container and the fog machine liquid tank immediately after filling. Cleaning your fog machine regularly can help you to reduce the frequency of parts replacement and maintenance costs. After every 40 hours of continuous operation, it is recommended to use distilled water to clean the heater according to the steps below.

The recommended cleaning regimen is as follows:

1. Fill properly distilled water into a clean tank and connect the fluid tube of the fog machine to the tank.
2. Run the unit in a well-ventilated area until the tank is almost empty.
3. Use dry cloth to wipe the fog machine. Cleaning is now complete. Refill with fog liquid. Run the machine briefly to clear any remaining liquid from the pump and heater.

Note: All fog machines are prone to clogging due to the thick consistency of fog liquid and the high temperature at which it vaporizes. However, a properly maintained fog machine should provide years of reliable use.

Clean with a dry cloth only. Store dry.

If the fog machine is not in use, please clean it before storage. Store the fog machine in a dry and cool place. Operate the fog machine at least once a month. A test-run consists of warming-up the machine followed by a few minutes of fog emission.



## 10. Technical specifications

PowerSupply:	100~240V AC 50/60Hz
Power Consumption:	1500W
Output Volume:	20,000cu.ft/min(566m <sup>3</sup> /min)
Tank Capacity:	6 liters
Fluid Consumption:	10 min/liter
Warm-up Time:	10 min
Weight:	14.5kg
Dimensions (LxWxH):	561x 278x 186(mm)

Note: the wireless DMX Reciver CRMX™ from Lumen Radio is an optional accessory.

Optional accessories

Upgrade kit CRMX Universal FT (P/N 99030204)

## 11. Approval

This product is in accordance with the R&TTE directive (Radio and Telecommunication Technical Equipment) of the European Union and falls into equipment Class 1. In all EU member countries, the operation of this wireless system is generally approved by the national telecom regulatory authority. The system is license-free. In some countries outside the EU, the operation of this wireless system may needs to be approved by the national telecoms regulatory authority.

## 12. Warranty

Warranty shall be valid only if the product is purchased from Robe's authorized distributors or dealers. For warranty service, send the product only to an authorized distributor or dealer.

All warranties are void if the product has been modified in any manner; if the product has been repaired or serviced by unauthorized personnel; or the product is damaged due to improper use or maintenance as set forth in the instruction manual.

This is not a service contract and does not include standard maintenance or cleaning. All expendables are not covered by this warranty.

Additional warranties provided at the discretion of the distributor dealers shall remain the sole obligation of the distributor or dealer.

Always quote the unit's serial number and model name when contacting your distributor for information or assistance.

Please read and save these instructions.

May 31, 2022

Specifications are subject to change without specification

